

### Checking the version

This manual applies to program “version 1.50” or later.  
Please check the version of the system working on your TR-6S.

1. Press the [UTILITY] button.  
The setting screen appears.
2. Use the [VALUE] knob to select “INFORMATION:Version.”
3. Press the [VALUE] knob .  
The display shows the current version.

\* Don't perform the update if the product is already up-to-date.

### System Update

This manual applies to program “version 1.50” or later.  
For details on updating the system, refer to the following URL.

<https://www.roland.com/support/>

1. On the Support menu, choose “Updates & Drivers.”
2. Choose “TR-6S” as the product name.
3. Choose “TR-6S SYSTEM PROGRAM.”

# Contents

<b>Panel Descriptions</b> .....	4
◇ <b>Top Panel</b> .....	4
◇ <b>Front Panel</b> .....	5
◇ <b>Bottom Panel</b> .....	5
Installing the Batteries .....	5
◇ <b>Rear Panel</b> (Connecting Your Equipment) .....	6
◇ <b>Before You Begin Playing</b> .....	7
Turning the TR-6S On .....	7
Turning Off the Power .....	7
Formatting an SD Card (SD CARD FORMAT) .....	7
<b>Overview of the TR-6S</b> .....	8
◇ <b>What Is a “PATTERN”?</b> .....	9
◇ <b>What Is a “KIT”?</b> .....	9
◇ <b>What Is a “MOTION”?</b> .....	9
<b>Main Screens</b> .....	10
<b>Playing Patterns</b> .....	11
◇ <b>Playing Patterns</b> .....	11
◇ <b>Selecting a Pattern</b> .....	11
◇ <b>Changing the Length of the Variation</b> (Setting the Variation's Last Step) .....	11
Changing the Length of a Specific Track (Setting the Track's Last Step) .....	12
◇ <b>Generating a Random Pattern</b> .....	12
◇ <b>Selecting a Random Instrument for a Pattern</b> .....	12
Randomizing All Instruments .....	12
Creating a Random Instrument .....	12
◇ <b>Copying a Pattern</b> .....	12
◇ <b>Deleting a Pattern</b> .....	12
Clearing a Variation .....	12
Clearing a Track .....	13
◇ <b>Copying a Variation</b> .....	13
◇ <b>Selecting a Fill-In Variation</b> .....	13
Inserting a Fill-In (Manual Trigger) .....	13
Inserting a Fill-In at Regular Intervals (Auto Fill In) .....	13
◇ <b>Muting a Track</b> (MUTE) .....	13
◇ <b>Adjusting the Reverb or Delay</b> .....	14
◇ <b>Master Effect</b> .....	14
Assigning a Parameter to the [CTRL (MASTER FX)] Knob .....	14
◇ <b>Assigning Parameters to the [CTRL] Knobs</b> (CTRL SELECT) .....	14
◇ <b>Assigning a Different Function for Each Instrument to the [CTRL] Knob</b> .....	14
◇ <b>Adjusting the Tempo</b> .....	14
Tap Tempo .....	14
◇ <b>Finely Adjusting the Timing of Notes</b> (Nudge Function) .....	14
◇ <b>Recording to a Variation That's Not Playing</b> .....	15
◇ <b>Returning to the Beginning of the Pattern</b> .....	15
◇ <b>Checking the Value of a Knob or Fader</b> .....	15
◇ <b>Reloading the Value of a Knob or Fader</b> (Reload Function) .....	15


<b>Recording Knob Movements at Steps</b> (Motion) ..	16
◇ <b>Recording/Playing MOTION</b> .....	16
◇ <b>Clearing Motion Data of a Selected Target</b> .....	16
<b>Editing the Pattern Settings</b> (Pattern Setting) .....	17
◇ <b>PTN SETTING Parameters</b> .....	17
◇ <b>Saving the Pattern, Kit, or System Settings</b> (WRITE) ..	18
◇ <b>Copying a Pattern or Kit</b> (COPY) .....	18
◇ <b>Deleting a Pattern</b> .....	19
Clearing a Variation .....	19
Clearing a Track .....	19
Reloading a Pattern or Kit (Reload Function) .....	19
<b>Step Recording</b> (TR-REC) .....	20
◇ <b>Entering Sub Steps or Flams</b> .....	20
◇ <b>Inputting Weak Beats</b> .....	20
◇ <b>Inputting Alternate Sounds</b> (ALT INST) .....	20
◇ <b>Specifying Accents</b> .....	20
◇ <b>Deleting a Recorded Step from the Track</b> .....	20
◇ <b>Setting the Probability</b> (PROB, SUB PROB) .....	20
<b>Realtime Recording</b> (INST REC) .....	21
◇ <b>Performing/Recording Sub Steps and Flams</b> .....	21
◇ <b>Playing/Recording Weak Beats</b> (WEAK BEATS) .....	21
◇ <b>Playing/Recording Alternate Sounds</b> (ALT INST) .....	21
◇ <b>Deleting a Recorded Step from the Track</b> .....	21
<b>Playing the Pads</b> (INST PLAY) .....	22
◇ <b>Performing Sub Steps and Flams</b> .....	22
◇ <b>Performing Weak Beats</b> (WEAK BEATS) .....	22
◇ <b>Performing Alternate Sounds</b> (ALT INST) .....	22
◇ <b>Performing a Roll</b> (ROLL) .....	22
<b>Looping a Specific Step</b> (STEP LOOP) .....	23
Holding the Loop Playback .....	23
Playing a step as a roll .....	23
◇ <b>To Cancel Step Loop Mode</b> .....	23
<b>Editing a Kit's Settings</b> (KIT Edit) .....	24
◇ <b>Saving the Pattern, Kit, or System Settings</b> (WRITE) ..	25
<b>Editing an Instrument's Sound</b> (INST Edit) .....	26
<b>Importing or Exporting a Pattern or Kit</b> .....	27
◇ <b>Exporting a Pattern or Kit</b> .....	27
Exporting a Pattern .....	27
Exporting a Kit .....	27
◇ <b>Importing a Pattern or Kit</b> .....	28
Importing a Pattern .....	28
Importing a Kit .....	29

<b>Assigning an Imported User Sample to an Instrument</b> .....	30
◇ Importing a User Sample (SAMPLE Import) .....	30
◇ Assigning a User Sample to an Instrument (SAMPLE) .....	31
◇ Editing a User Sample Tone's Settings (SAMPLE Edit) ..	31
◇ Deleting a User Sample (SAMPLE Delete) .....	32
◇ Renaming a User Category (Category Name) .....	32
◇ Optimizing the User Sample Area (OPTIMIZE) .....	32
<b>Convenient Functions and Settings (UTILITY) ...</b>	33
◇ SYSTEM Parameters / UTILITY Menu .....	33
<b>Initializing, Backing-Up, Restoring</b> .....	34
◇ Returning to the Factory Settings (FACTORY RESET) ...	34
◇ Backing Up Data to SD Card (BACKUP) .....	34
◇ Restoring Data That Was Backed Up to SD Card (RESTORE) .....	35
<b>Synchronizing/Recording with Other Devices</b> .....	36
◇ Synchronizing with a DAW (TR-6S as Slave) .....	36
◇ Synchronizing with a MC-101 (TR-6S as Master) .....	36
◇ Using the TR-6S as a MIDI Controller .....	36
◇ Connecting a Computer via USB .....	36
◇ Using a Computer to Manage the Connected SD Card (STORAGE MODE) .....	36
<b>Error Message List</b> .....	37
<b>List of Shortcut Keys</b> .....	38
◇ Switching Screens and Modes .....	38
◇ Showing the Value or Parameter Name of a Controller .....	38
◇ Inputting Characters .....	38
◇ Editing Parameters .....	38
◇ Editing a Pattern .....	38
◇ MOTION .....	38
◇ Inputting Sub Steps, Weak Beats, Alternates, and Dynamics .....	38
◇ Playback/Recording .....	38
◇ Tempo/Nudge .....	38
◇ Copying .....	39
◇ Deleting .....	39
◇ Editing an Instrument or Track .....	39
◇ Assigning Parameters to the [CTRL] Knob .....	39
◇ Performing on the Pad .....	39
◇ Reloading .....	39
<b>Main Specifications</b> .....	40

Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (the leaflet "Read Me First"). After reading, keep the document(s) where it will be available for immediate reference.

# Panel Descriptions

## Top Panel

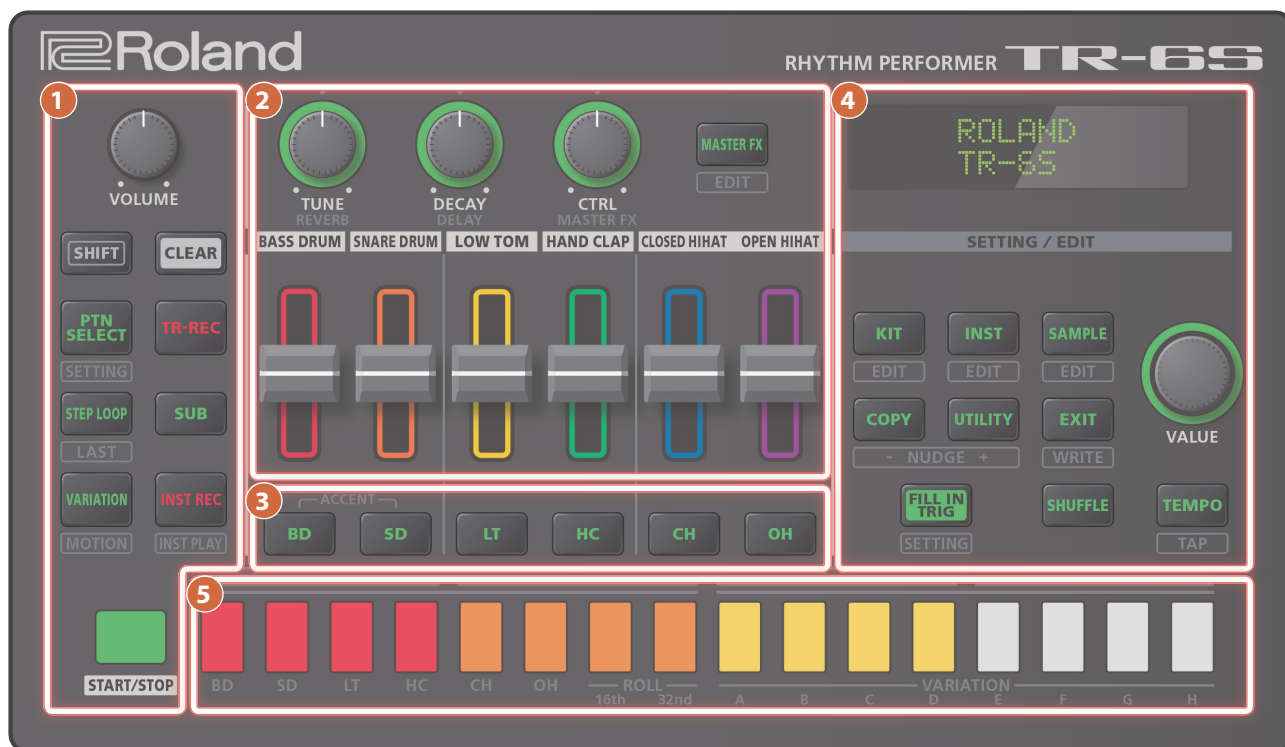

### 1 Common section 1

#### [VOLUME] knob

Adjusts the MIX OUT jack, PHONES jack's volume.

#### [SHIFT] button

By holding down this button and operating certain other buttons, you can access a screen for making related settings.

By holding down this button when you turn the [VALUE] knob to change the value of a parameter, you can make the value change more greatly.

#### [CLEAR] button

Erases the recorded content for an individual instrument, or deletes a pattern.

#### [PTN SELECT] button

Select a pattern.

page 11

#### [TR-REC] button

Step-records a pattern.

page 20

#### [STEP LOOP] button

While a pattern is playing, you can loop-play the selected step.

page 23

- \* Hold down the [SHIFT] button and press this button to specify the length of the pattern.

#### [SUB] button

Inputs/plays sub steps.

page 20

#### [VARIATION] button

Switch pattern variations (A–H).

page 11

#### [INST REC] button

Records a pattern in real time.

page 21

- \* If you hold down the [SHIFT] button and press the [INST REC] button, you enter INST PLAY mode, and can use pads [1]–[8] to play in real time.  
→ "Playing the Pads (INST PLAY)" (p. 22)

#### [START/STOP] button

Play or stop the pattern.

- \* If a sample is selected as the instrument's tone, the sound might not stop automatically depending on the instrument edit settings. While a pattern is stopped, you can silence all currently-sounding samples by holding down the [SHIFT] button and pressing the [START/STOP] button.

### 2 INST edit section

Here you can adjust the tonal character of the instrument's tone.

When the instrument select buttons are unlit, these knobs adjust the effects.

#### [TUNE] knob

Adjusts the tuning (pitch).

#### [DECAY] knob

Adjusts the length of the decay.

#### [CTRL] knob

Controls the content specified by CTRL SELECT (p. 14).

- \* Depending on the tone, there might not be any effect.

#### [MASTER FX] button

Turns the master effect on/off.

#### Level fader

Adjusts the volume of each instrument.

**3 Instrument select [BD] [SD] [LT] [HC] [CH] [OH] buttons**

During TR-REC, these buttons select the instrument that is recorded.

In the INST screen or INST Edit screen, these buttons select the instrument whose settings you want to edit.

**4 Common section 2**

**Display**

Shows pattern names and various settings.

page 10

**[VALUE] knob**

Modify values.

Press the knob to confirm a value or execute an operation.

The knob blinks in time with the specified tempo.

**[KIT] button**

Selects a kit.

page 24

**[INST] button**

Selects a sound (instrument's tone) for the instrument.

page 26

**[SAMPLE] button**

Selects a sample as the sound (instrument's tone) for the instrument.

page 30

**[COPY] button**

Copies a pattern/kit.

page 12

**[UTILITY] button**

Lets you edit or initialize various settings.

page 33

**[EXIT] button**

Returns you to the previous screen.

In some screens, this cancels the operation currently being executed.

When you hold down the [SHIFT] button and press the [EXIT] button, the WRITE screen appears.

**[FILL IN TRIG] button**

Press this button to insert a fill-in.

**[SHUFFLE] button**

Adjusts the amount of shuffle (bounce).

**[TEMPO] button**

Specifies the tempo.

**5 Pad [1]–[16]**

Mode	Explanation
TR-REC	For each step, specify whether the instrument's tone will sound.
PTN SELECT	Select a pattern. Hold down the [PTN SELECT] button and use pads [1]–[8] to select a bank. Release the [PTN SELECT] button and use pads [1]–[16] to select a number.
INST PLAY	<ul style="list-style-type: none"> <li>Pads [1]–[6](INST) play instrument's tones.</li> <li>If you hold down either the [7] or [8] (ROLL) pad (or both) and press a [1]–[6] pad, the instrument's tone plays a roll. There are three types of roll ([7] 16th note, [8] 32nd note, [7] + [8] 64th note).</li> </ul>

Mode	Explanation
INST REC	During realtime recording, the pads record the corresponding instrument's tone.
STEP LOOP	Selects the step that is loop-played.

**Front Panel**



**A PHONES jack**

You can connect a set of headphones here.

**Bottom Panel**

**Installing the Batteries**


As an alternative to USB bus power, you can use commercially available AA nickel-metal hydride batteries or alkaline batteries to power the unit.

\* If USB bus power is being supplied, the unit uses USB bus power even if batteries are installed.

**1. Remove the battery cover.**

\* When turning the unit over, be careful so as to protect the buttons and knobs from damage. Also, handle the unit carefully; do not drop it.

**2. Taking care to observe the correct orientation of the batteries, insert the batteries into the battery case.**

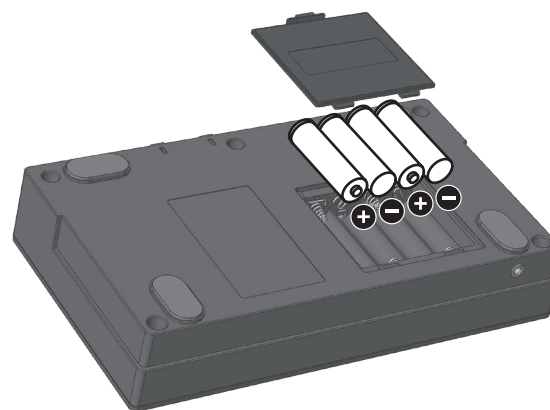

**3. Close the battery cover.**

\* If you handle batteries improperly, you risk explosion and fluid leakage. Make sure that you carefully observe all of the items related to batteries that are listed in "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (leaflet "Read Me First").


**Battery replacement indicator**

When the batteries run low, an indication appears in the screen.

When this occurs, install new batteries.

### Rear Panel (Connecting Your Equipment)

\* To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

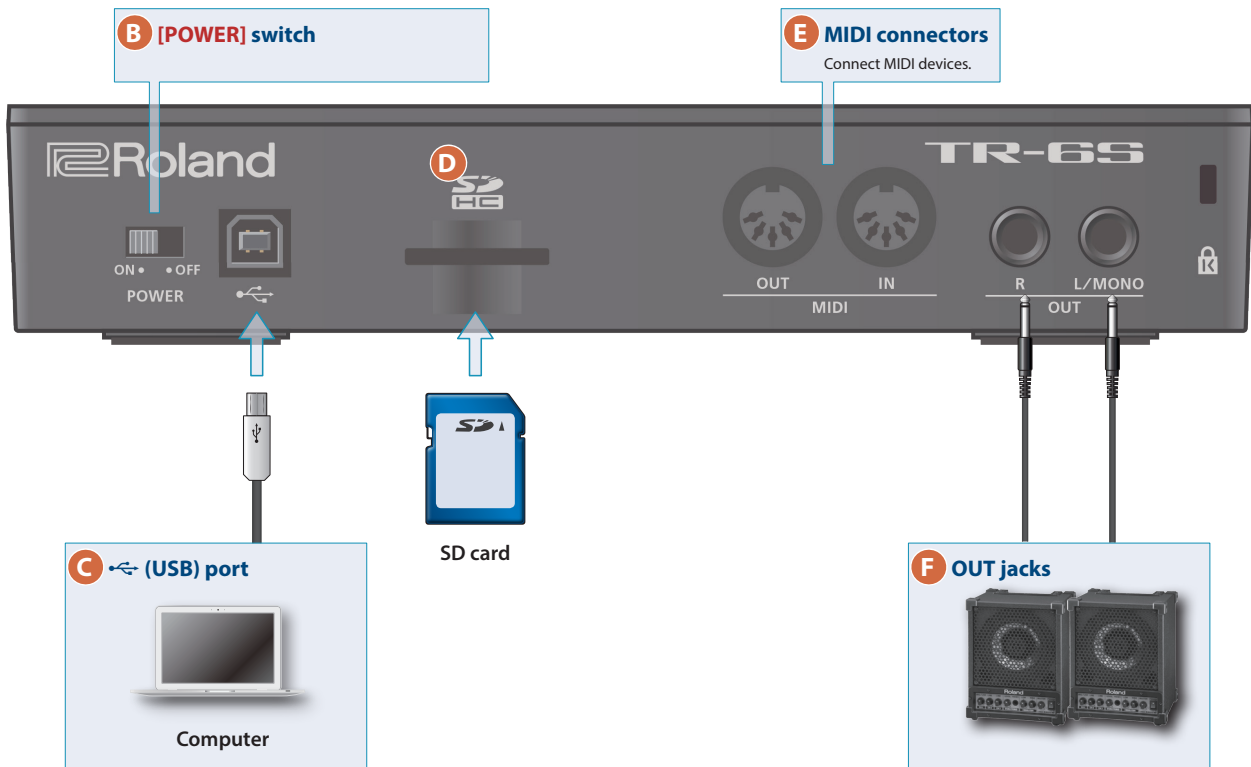

#### **B** [POWER] switch

Turns the power on/off.

➔ "Before You Begin Playing" (p. 7)

#### **C** (USB) port

Use a commercially available USB 2.0 cable to connect this port to your computer. It can be used to transfer USB MIDI and USB audio data. You must install the USB driver before connecting the TR-6S to your computer. For details, refer to Readme.htm in the downloaded file.

➔ <https://www.roland.com/support/>

\* If USB bus power is being supplied, the unit operates on USB bus power.

#### **D** SD card slot

The SD card contains various data (settings, sounds, samples, etc.) for this unit.

\* Never turn off the power or remove the SD card while the SD card is being accessed.

\* Some memory card types or memory cards from some manufacturers may not record or play back properly on the unit.

#### **E** MIDI (OUT, IN) connectors

Use a commercially available MIDI cable to connect MIDI devices here.

#### **F** OUT (L/MONO, R) jacks

Connect these jacks to your amp or monitor speakers.

## Before You Begin Playing

- \* Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.

## Turning the TR-6S On

1. Turn on the power in the order of the TR-6S first, and then the connected system.
2. Switch on power to the connected equipment, and raise the volume to an appropriate level.

## Turning Off the Power

1. Power-off the connected system first, and then the TR-6S.

## Formatting an SD Card (SD CARD FORMAT)

If using an SD card, please format it on the TR-6S. SD cards are sold separately. Please obtain a SD card separately.

1. Press the **[UTILITY]** button.

The UTILITY screen appears.

2. Use the **[VALUE]** knob to select **"SD CARD:Format."**



A screenshot of the SD CARD:Format screen. The text "SD CARD:" is on the top line, and "Format" is on the bottom line with a right-pointing arrow to its right.

3. Press the **[VALUE]** knob.

A confirmation message appears.




A screenshot of the Format SD Card? confirmation screen. The text "Format SD Card?" is on the top line, and "[Cancel] [OK]" is on the bottom line.

4. To execute, use the **[VALUE]** knob to select **"OK,"** and press the **[VALUE]** knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

# Overview of the TR-6S

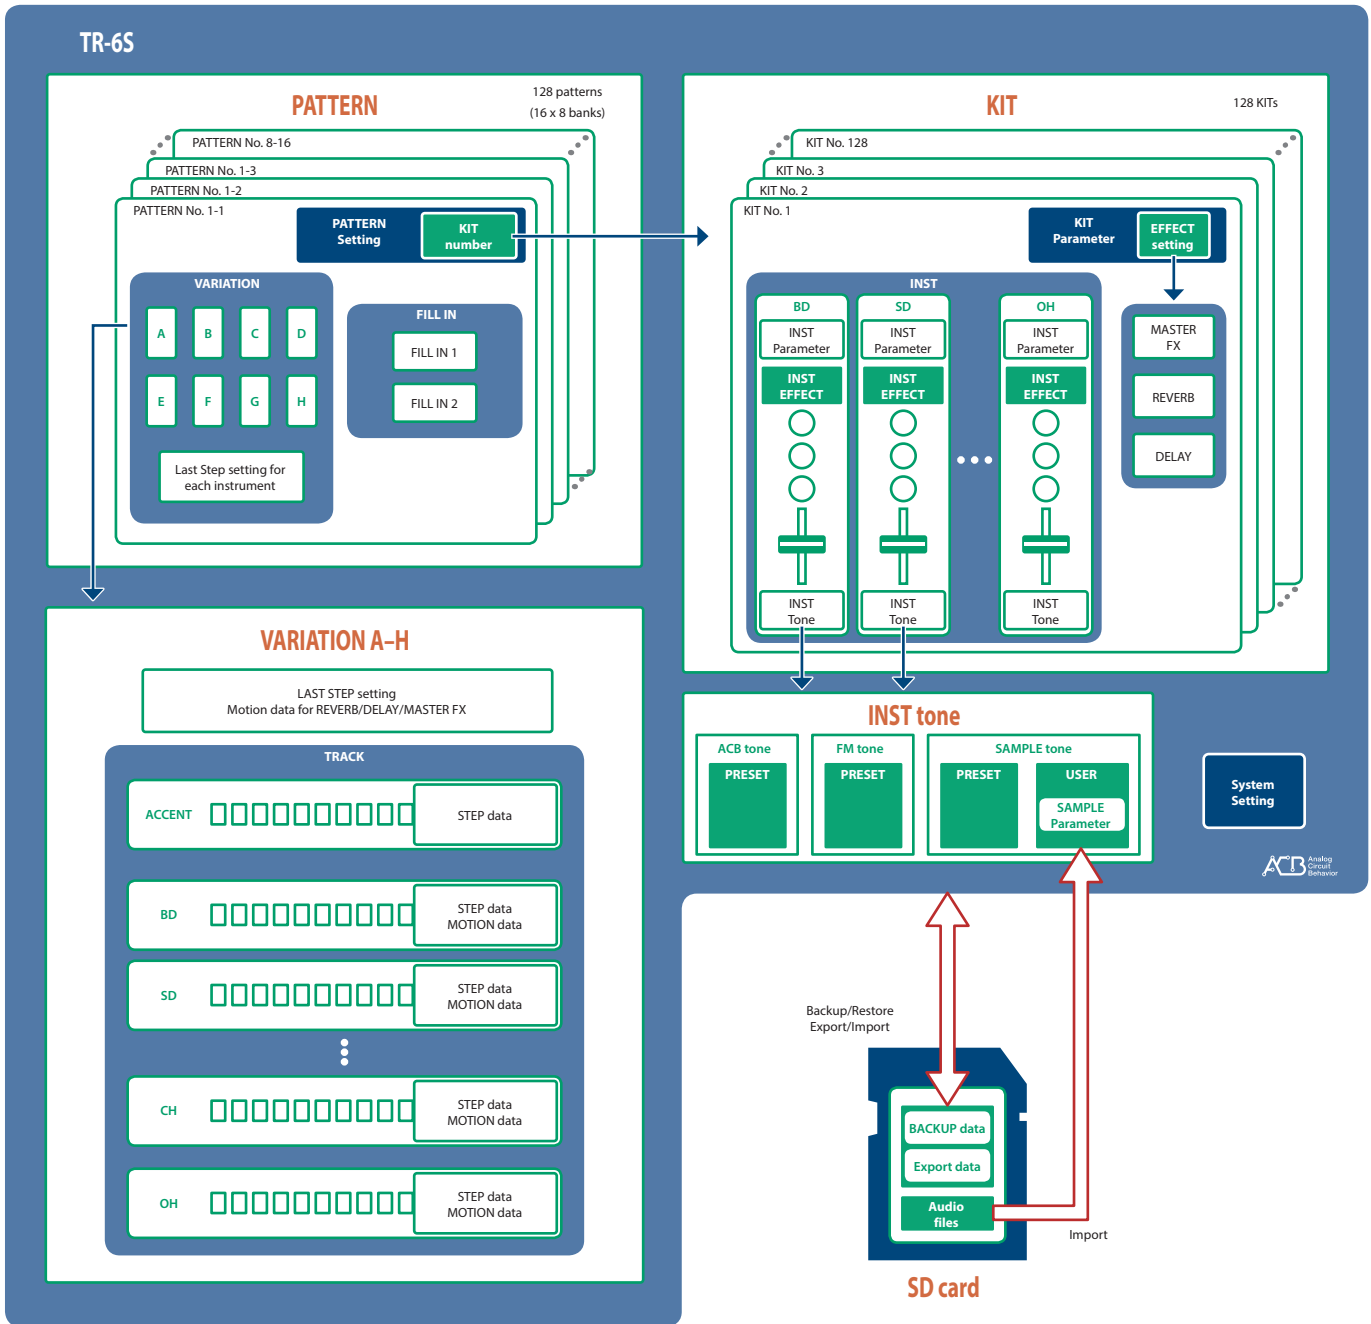

\* If you want to make a backup, save the data (patterns, kits, system settings) before you proceed. The backup will not include the pattern or kit that you're currently editing (shown by an "\*" indication) or system settings that you have not saved.




## What Is a “PATTERN”?

The performance data that you record using TR-REC or INST-REC is called a “pattern.”

The TR-6S has 128 patterns (16 patterns x 8 banks); each pattern has eight variations (A–H) and two fill-in patterns.


The variations (A–H) and the two fill-ins each have seven tracks (ACCENT, BD, SD, LT, HC, CH, OH).

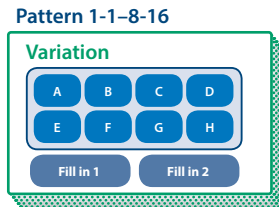


## What Is a “KIT”?

The 6 instruments are collectively called a “kit.” The TR-6S has 128 kits.

The pattern plays the instruments of the currently selected kit.

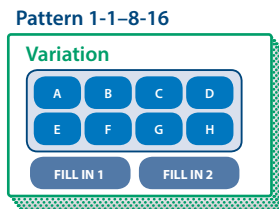

A pattern plays the inst of the kit.

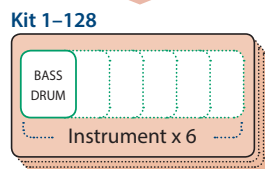

## What Is a “MOTION”?


On the TR-6S, knob or switch movements can be recorded in a pattern as “motions” and played back.

### Knobs and switches that can be recorded in a motion


- [REVERB] knob
- [DELAY] knob
- [MASTER FX] switch
- [MASTER FX] knob
- [TUNE] knob of each instrument
- [DECAY] knob of each instrument
- [CTRL] knob of each instrument

When using motion recording (when the [INST REC] button is lit), the “M” icon appears in the screen when you operate a knob or switch.

**When [INST REC] button is lit**



**When [INST REC] button is unlit**



## About saving the pattern and kit

Parameters of the pattern or kit that you’re editing are remembered until you turn off the power. Even if you select a different pattern or kit, and then re-select the one you had been editing, it is recalled in the edited state; however, if you turn the power off and on again, it returns to the unedited state. **If you want to keep the edits that you made to a pattern or kit, you must save that pattern or kit.**

# Main Screens

## PTN SELECT

Select the pattern to play.

Bank Number

```
PATTERN▶ 1-01
Berlin Flyover
```

Name of currently playing pattern

Variation currently selected for recording A-H

Pattern that plays next

```
NEXT PTND▶ 1-02
Groovy Night
```

Name of pattern that plays next

```
NEXT PTND▶ 1-02
1-01 ▶ 1-02
```

Currently playing pattern

Pattern that plays next

## TR-REC

Create a pattern by specifying the steps at which each track plays a sound.

```
TR-REC▶ 1-01
Berlin Flyover
```

## STEP LOOP

Loop-plays the selected step during pattern playback.

```
STEP LOOP▶ 1-01
Berlin Flyover
```

## LAST

([SHIFT] button + [STEP LOOP] button)

Specify the length (last step) of a variation or track.

```
LAST STEP▶
EDIT INST
```

## VARIATION

Use the 16 step buttons to switch the pattern variation (A-H).

```
VARIATION▶ 1-01
Berlin Flyover
```

## SUB

Input or perform sub steps or flams.

```
SUB STEP▶ 1/2
```

```
SUB STEP▶ FLAM
```

## INST REC

Create a pattern by realtime-recording your performance on pads [1] (BD)–[6] (OH).

```
INST REC▶ 1-01
Berlin Flyover
```


Record to the currently-playing variation or fill-in.

## INST PLAY

([SHIFT] button + [INST REC] button)

Play pads [1] (BD)–[6] (OH) in real time.

```
INST PLAY▶ 1-01
Berlin Flyover
```

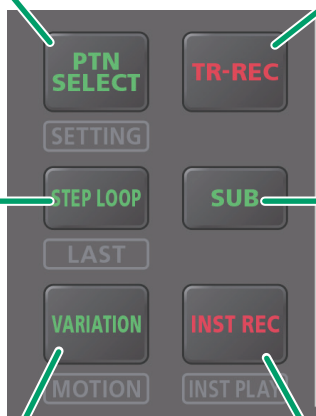

# Playing Patterns

## Playing Patterns

1. Press the **[START/STOP]** button.
2. Use the controllers of the instrument edit section to modify the sound.
3. To stop, press the **[START/STOP]** button once again.

### MEMO

- During playback, you can hold down the [SHIFT] button and press the [START/STOP] button to return to the beginning of the pattern.
- To stop samples that are still sounding after the pattern has stopped, hold down the [SHIFT] button and press the [START/STOP] button.

## Selecting a Pattern

1. Hold down the **[PTN SELECT]** button and press a pad **[1]–[8]**.

The bank is selected.

2. Release the **[PTN SELECT]** button.

3. Use pads **[1]–[16]** to select a pattern.

The selected pad blinks. During playback, it is lit.

When you select the next pattern during playback, the pad blinks. The pattern switches when playback returns to the first step.

You can select a region by pressing two pads simultaneously. The selected patterns play in succession.

4. Press the **[VARIATION]** button to make it light, and then use pads **[A]–[H]** to select a variation.

You can select multiple variations by holding down a button and pressing other buttons.

The selected variations are lit, and those whose buttons are lit play once each in the order of A → H.

## Changing the Length of the Variation

### (Setting the Variation's Last Step)

The overall number of steps used by a variation (the variation's last step) can be specified individually for each variation.

1. Hold down the **[SHIFT]** button and press the **[STEP LOOP (LAST)]** button.

The [STEP LOOP] button blinks and then the LAST STEP screen appears.

2. Use the **[VALUE]** knob to select the variation for which you want to make the setting.

The variation for which you're making the setting is shown in the upper right of the screen.

If "H" is shown, turning the [VALUE] knob toward the right lets you select FILL IN 1 or FILL IN 2.

You can select multiple variations by holding down the [SHIFT] button and [STEP LOOP] button, and then pressing a pad [A]–[H].

3. Use pads **[1]–[16]** to select the last step.

## About variations

Each pattern has eight variations, A–H.

Press a pad [A]–[H] to select the variation A–H that you want to play back or record.

If you want to play back multiple variations, hold down one of the [A]–[H] pads and press the other pads [A]–[H] that you want to additionally play back.

The target of recording is the variation of the pad that you press first.

### Lit/unlit state of the pads [A]–[H]

Lit light blue	Ready to play
Blinking light blue	Playing

While you long-press the [TR-REC] button, the following indications are added to the above.

Short blinking purple	During PLAY&REC (TR-REC/INST REC)
Blinking purple	Selected for both PLAY and REC
Blinking red	Selected as the target of recording

## Selecting the variation during TR-REC

By holding down the [TR-REC] button and pressing a pad [A]–[H], you can select the target of recording while maintaining the playback-target variation.

You can also select the target of recording by holding down the [TR-REC] button and turning the [VALUE] knob. In this case, you'll be able to select FILL IN 1 or FILL IN 2.

## About fill-in

Each pattern has two dedicated FILL IN variations. You can also use the Scatter function as a fill-in.

➔ "Selecting a Fill-In Variation" (p. 13)

## What is Scatter?

"Scatter" adds a digital-feeling groove to the loop playback by exchanging individual steps within the loop playback and also by changing the playback direction or gate length.

1. You can adjust Scatter Depth by holding down the **[FILL IN TRIG]** button and turning the **[VALUE]** knob.

\* The scatter effect will not apply to the first cycle of the loop; the effect will apply to the second and subsequent cycles of the loop.

## About the LAST STEP setting

When the LAST STEP screen is displayed

### Turning the [VALUE] knob

Specifies the LAST STEP of the variation.

### Pressing the INST select button

Specifies the LAST STEP of the selected track.

### Changing the Length of a Specific Track (Setting the Track's Last Step)

The number of steps used by a track (the track's Last Step) can be specified individually for each track.

1. Hold down the **[SHIFT]** button and press the **[STEP LOOP (LAST)]** button.

The [STEP LOOP] button blinks and then the LAST STEP screen appears.

2. Use instrument select buttons **[BD]–[OH]** to select the track whose setting you want to edit.

\* You can select multiple tracks by holding down a button and pressing other buttons.

3. Use pads **[1]–[16]** to select the last step.

#### Clearing a track's Last Step setting

1. While holding down the **[SHIFT]** button, press the **[STEP LOOP (LAST)]** button.

The [STEP LOOP] button blinks and then the LAST STEP screen appears.

2. Press the instrument select button **[BD]–[OH]** of the track whose setting you want to clear.

The instrument select button that you pressed blinks.

The currently-specified last step is shown by pads [1]–[16].

3. Press the **[CLEAR]** button.

The last step of the selected track is cleared, and pads [1]–[16] go dark; the last step is set to the overall number of steps specified for each variation.

#### MEMO

The track's Last Step setting is shared by variations A–H. Also, the track's Last Step takes priority over the variation's Last Step.

### Generating a Random Pattern

You can automatically generate a random pattern. This modifies the selected pattern.

1. Hold down the **[PTN SELECT]** button and press the **[SAMPLE]** button.

A random pattern is provisionally generated for the selected variation.

The [TR-REC] button blinks.

2. When you press the **[TR-REC]** button.

The provisionally generated random pattern changes to the current pattern.

In this state, the pattern is not yet saved. If you want to save it, execute the WRITE operation.

➔ "Saving the Pattern, Kit, or System Settings (WRITE)" (p. 25)

### Selecting a Random Instrument for a Pattern

#### Randomizing All Instruments

This feature switches the instrument tones for all tracks to a random instrument within their current categories.

1. Hold down the **[SAMPLE]** button and press the **[INST]** button.

2. Hold down the **[SAMPLE]** button and press the **[UTILITY]** and **[INST]** buttons.

The random instruments that are temporarily created revert to the instruments saved in the kit.

#### Creating a Random Instrument

This feature switches the instrument tones for each selected tracks to a random instrument within the current categories.

1. Hold down the **[SAMPLE]** button and press the instrument select buttons **[BD]–[OH]**.

2. Hold down the **[SAMPLE]** button and press the **[UTILITY]** button and instrument select buttons **[BD]–[OH]**.

The random instruments that are temporarily created revert to the instruments saved in the kit.

### Copying a Pattern


1. Press the **[COPY]** button.

The COPY screen appears.



2. Use the **[VALUE]** knob to select "Pattern," and then press the **[VALUE]** knob.

3. Use the **[VALUE]** knob to select the copy-source, and press the **[VALUE]** knob.

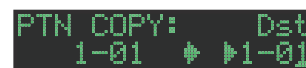

4. Use the **[VALUE]** knob to select the copy-destination, and press the **[VALUE]** knob.

A confirmation message appears.

5. Use the **[VALUE]** knob to select "OK," and press the **[VALUE]** knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

### Deleting a Pattern

1. Press the **[PTN SELECT]** button.

2. Hold down the **[CLEAR]** button and use the pads **[1]–[16]** to specify the pattern that you want to delete.

### Clearing a Variation

1. Press the **[VARIATION]** button.

2. Hold down the **[CLEAR]** button and use the pads **[A]–[H]** to select the variation that you want to clear.

All steps of the specified variation are cleared.

### Clearing a Track

1. Hold down the instrument select button **[BD]–[OH]** of the track that you want to clear and press the **[CLEAR]** button.

All steps of the selected track are cleared.

This affects only the selected variation.

### Copying a Variation

1. Press the **[COPY]** button.

The COPY screen appears.



2. Use the **[VALUE]** knob to select “Variation,” and then press the **[VALUE]** knob.
3. Use the **[VALUE]** knob to select the copy-source pattern, and press the **[VALUE]** knob.

Pattern number



Variation

4. Use the **[VALUE]** knob to select the copy-source variation, and press the **[VALUE]** knob.
5. Use the **[VALUE]** knob to select the copy-destination pattern, and press the **[VALUE]** knob.
6. Use the **[VALUE]** knob to select the copy-destination variation, and press the **[VALUE]** knob.

A confirmation message appears.

7. To copy, use the **[VALUE]** knob to select “OK,” and press the **[VALUE]** knob.

If you decide to cancel, use the **[VALUE]** knob to select “Cancel,” and then press the **[VALUE]** knob.

### Selecting a Fill-In Variation

1. Hold down the **[SHIFT]** button and press the **[FILL IN TRIG]** button.
2. Use the **[VALUE]** knob to select “Select,” and then press the **[VALUE]** knob.
3. Use the **[VALUE]** knob to select a variation.
4. Press the **[FILL IN TRIG]** button.

You can also use a variation A–H as a FILL IN.

#### MEMO

If FILL IN Type = SCATTER, you can hold down the **[FILL IN TRIG]** button and use the **[VALUE]** knob to control SCATTER DEPTH.

### Inserting a Fill-In (Manual Trigger)

1. At the moment that you want to insert a fill-in, press the **[FILL IN TRIG]** button.

### Inserting a Fill-In at Regular Intervals (Auto Fill In)

Here’s how to automatically insert a fill-in at intervals of the specified number of measures.

1. Hold down the **[SHIFT]** button and press the **[FILL IN TRIG]** button.
2. Use the **[VALUE]** knob to select “Sw,” and then press the **[VALUE]** knob.
3. Use the **[VALUE]** knob to select “ON,” and then press the **[VALUE]** knob.
4. Use the **[VALUE]** knob to select “Cycle,” and then press the **[VALUE]** knob.
5. Use the **[VALUE]** knob to select the number of measures at which a fill-in is inserted.

Value: 32, 16, 12, 8, 4, 2

6. Press the **[FILL IN TRIG]** button.

### Muting a Track (MUTE)

Here’s how to mute (silence) a selected instrument.

1. Hold down the **[SHIFT]** button and press the instrument select button **[BD]–[OH]** that you want to mute.

The level fader of a muted instrument is unlit.

If you once again hold down the **[SHIFT]** button and press an instrument select button, muting is cleared.

## Adjusting the Reverb or Delay

If all the instrument select buttons are unlit, you can use the knobs to adjust reverb or delay.

If an instrument select button is lit, press the lit button.

Target	Controller
Volume of the reverb sound	[REVERB] knob
Volume of the delay sound	[DELAY] knob
MASTER FX parameter	[MASTER FX] knob

For detailed reverb and delay settings, refer to “Editing a Kit’s Settings (KIT Edit)” (p. 24).

## Master Effect

When all of the instrument select buttons are unlit, you can use the knobs to adjust the effects.

\* If an instrument select button is lit, press the lit button to make it go dark.

1. Press the [MASTER FX] button to make it light.
2. Use the [CTRL (MASTER FX)] knob to adjust the depth of the effect.

## Assigning a Parameter to the [CTRL (MASTER FX)] Knob

1. Hold down the [SHIFT] button and press the [MASTER FX] button.
2. Use the [VALUE] knob to select “KIT: MASTER FX >Ctrl,” and then press the [VALUE] knob.
3. Use the [VALUE] knob to select a parameter.
4. Press the [EXIT] button several times.

## Assigning Parameters to the [CTRL] Knobs (CTRL SELECT)

You can assign parameters to the [CTRL] knobs of the instrument edit section, and control those parameters while the pattern plays back.

1. Hold down the [SHIFT] button and press the [KIT] button.
2. Use the [VALUE] knob to select “KIT: CTRL >Sel,” and then press the [VALUE] knob.
3. Use the [VALUE] knob to select a parameter.

The same parameter is selected for all instruments.

If you select User, you can assign different functions for each instrument.

4. Press the [KIT] button.

## Assigning a Different Function for Each Instrument to the [CTRL] Knob

1. Hold down the [SHIFT] button and press the [KIT] button.
2. Use the [VALUE] knob to select “KIT: CTRL >BD-OH,” and then press the [VALUE] knob.
3. Use the [VALUE] knob to select a parameter.
4. Press the [KIT] button.

### MEMO

In advance, use “Assigning Parameters to the [CTRL] Knobs (CTRL SELECT)” (p. 14) to specify “User.” If something other than “User” is specified, this parameter is not shown.

## Adjusting the Tempo

1. Press the [TEMPO] button.
  2. Turn the [VALUE] knob to make the adjustment.
- By holding down the [SHIFT] button and turning the [VALUE] knob, you can adjust the setting in steps of 0.1 units.

## Tap Tempo

Here’s how to tap-input the tempo.

1. While holding down the [SHIFT] button, press the [TEMPO] button three or more times.


The tempo is specified as the average timing at which you press the button.

## Finely Adjusting the Timing of Notes (Nudge Function)

The “nudge” function lets you adjust the timing of notes forward or backward.

Using the nudge function changes the playback timing of the entire pattern.

Operation	Explanation
[SHIFT] + [COPY] button	NUDGE- Moves the playback timing backward.
[SHIFT] + [UTILITY] button	NUDGE+ Moves the playback timing forward.

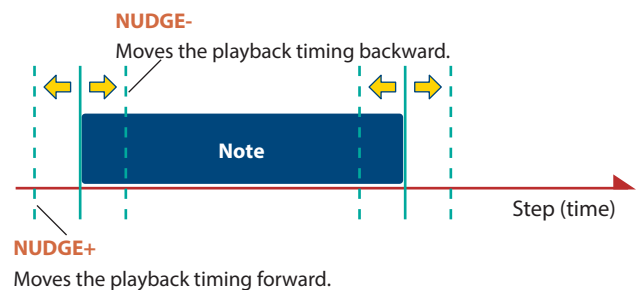

### MEMO

- You can finely adjust the timing according to the number of times that you press the button.
  - This applies only during playback. When you stop, the timing returns to its original state.
  - You can use a system setting to specify whether the MIDI clock timing is changed.
- ➔ “MIDI TX: Tx Nudge”

## Recording to a Variation That's Not Playing

Here's how you can record to a different variation without changing the variation that's selected to play (TR-REC only).

1. Hold down the **[TR-REC]** button and use the pads **[A]–[H]** to select the variation that you want to record.

You'll switch to TR-REC, and can record to the selected variation.

### MEMO

You can also select this by holding down the [TR-REC] button and turning the [VALUE] knob. In this case, you'll be able to select FILL IN 1 or FILL IN 2.

## Returning to the Beginning of the Pattern

Here's how to forcibly return to the beginning of the pattern while it's playing.

1. Hold down the **[SHIFT]** button and press the **[START/STOP]** button.

### Moving to the beginning of a different variation

If more than one variation is selected, here's how you can move to the beginning of any one of those variations.

1. Set the basic screen to **VARIATION**.
2. Hold down the **[SHIFT]** button and press a pad **[A]–[H]**.

## Checking the Value of a Knob or Fader

During playback or editing, here's how to check the value of each controller.

1. Hold down the **[SHIFT]** button and operate the controller whose value you want to check.

The screen shows the parameter and its value.

Moving the controller does not change the value.

## Reloading the Value of a Knob or Fader

(Reload Function)

During playback or editing, here's how you can reload the value of a controller (return it to the saved state).

1. Hold down the **[UTILITY]** button and operate the controller whose value you want to load.

The screen shows the parameter and its value.

Moving the controller does not change the value.

Operation	Explanation
<b>[UTILITY]</b> + <b>[KIT]</b>	Load controllers (all)
<b>[UTILITY]</b> + <b>[INST]</b>	Load controller (currently selected instrument)

# Recording Knob Movements at Steps (Motion)

## Recording/Playing MOTION

When "INST REC" is "ON," movements of the instrument's [TUNE] knob, [DECAY] knob, and [CTRL] knob are recorded in the steps.

If you hold down the [SHIFT] button and press the [VARIATION] button to turn MOTION "ON," the recorded knob movements are played.

\* REVERB LEVEL, DELAY LEVEL, MASTER FX CTRL, and MASTER FX ON are also recorded/played according to the MOTION status.


### MOTION setting

1. Hold down the [SHIFT] button and press the [VARIATION] button.
2. Use the [VALUE] knob to select "ON."  
Select "OFF" if you don't want to record or play back motion data.
3. Press the [EXIT] button.

### Entering a value at a specified step

While the [TR-REC] button is lit, you can specify a step and enter a value for a knob.

1. Operate a knob while holding down a pad [1]–[16].

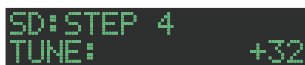

### MEMO

Alternatively, you can hold down a pad [1]–[16] and use the [UTILITY] (+) button and [COPY] (-) button to select the parameter that you want to enter, and then use the [VALUE] knob to make adjustments.

## Clearing Motion Data of a Selected Target

1. While holding down the [SHIFT] button and the [VARIATION] button, turn the [VALUE] knob to select the target for deletion, and then press the [VALUE] knob.

When you release your hand from the buttons, you return to the previous screen.

Target to clear	Explanation
ALL	All motion data is cleared.
VARIATION A–H	Variation motion data is cleared.
FILL IN 1, 2	FILL IN 1 and 2 motion data is cleared.
REVERB LEVEL	REVERB LEVEL motion data is cleared.
DELAY LEVEL	DELAY LEVEL motion data is cleared.
DELAY TIME	DELAY TIME motion data is cleared.
DELAY FEEDBACK	DELAY FEEDBACK motion data is cleared.
MASTER SW	MASTER SW motion data is cleared.
MASTER CTRL	MASTER CTRL motion data is cleared.

### Clearing motion data for only a specific knob

This clears all motion data of a knob recorded in the track that's specified by the variation selected for playback.


1. While holding down the [SHIFT] button and the [VARIATION] button, operate the knob.

### Clearing motion data for a specific step

While the [TR-REC] button is lit, you can specify a step and clear the knob values.

1. Long-press the pad [1]–[16] whose step contains the motion data that you want to clear.

The MOTION/VELOCITY input screen appears.



2. While holding down the pad that you pressed in step 1, press the [COPY] or [UTILITY] button to select the motion that you want to clear.

\* If the selected step (pad) does not contain motion data, "----" is shown as the value.

\* In this state, you can also turn the [VALUE] knob to input motion data.

3. While holding down the pad that you pressed in step 1, press the [CLEAR] button.

Clearing the motion data of the specified step (pad).



# Editing the Pattern Settings (Pattern Setting)

Here's how to specify the kit and tempo used by a pattern.

## 1. Hold down the [SHIFT] button and press the [PTN SELECT] button.

The PTN SETTING screen appears.



## 2. Select a parameter.

- 2-1. Use the [VALUE] knob to select a parameter.
- 2-2. Press the [VALUE] knob.

## 3. Modify values.

- 3-1. Use the [VALUE] knob to edit the value.
- 3-2. Press the [VALUE] knob.

You return to parameter selection (step 2).

## 4. Press the [PTN SELECT] button.

Exit the PTN SETTING screen.

### MEMO

You can also edit the value in step 2-2 by turning the [VALUE] knob while pressing it.

## PTN SETTING Parameters

### PTN SETTING: KIT

Parameter	Value	Explanation
Sw	OFF, ON	<b>OFF:</b> When you switch patterns, the kit does not change. <b>ON:</b> When you switch patterns, the kit also switches to the kit specified by PTN SETTING: KIT Number. * This setting is effective when [UTILITY] GENERAL: KitSel = PTN.
Number	001–128	Selects the kit that the pattern uses when PTN SETTING: KIT Sw is ON. * This setting is effective when [UTILITY] GENERAL: KitSel = PTN.

### PTN SETTING

Parameter	Value	Explanation
Tempo	40.0–300.0	Specifies the tempo of the pattern. * When [UTILITY] GENERAL: TempoSrc = PTN, the tempo specified here is used. The tempo specified here is also shown when you press the [TEMPO] button. * When [UTILITY] GENERAL: TempoSrc = SYSTEM, the tempo specified here is not used. The tempo specified by pressing the [TEMPO] button is used.
Scale	8th (T), 16th (T), 16th, 32nd	Selects the scale.
Shuffle	-128–0–+127	Adjusts the amount of shuffle. * When [UTILITY] GENERAL: Shuffle = PTN, this setting is used. * When [UTILITY] GENERAL: Shuffle = SYSTEM, this setting is not used.
Flam Spacing	0–8	Specifies the flam spacing interval.
ScatterType	1–10	Specifies the type of scatter.

Parameter	Value	Explanation
ScatterDepth [FILL IN TRIG] + [VALUE]	1–10	Adjusts the depth of scatter.
MstrProb (Master Probability)	-100–0–100%	You can add a value that affects the probability of the entire sequence. ➔ For more details on probability, refer to "Setting the Probability (PROB, SUB PROB)" (p. 20) * This has no effect if the individual probabilities are not set.

### MEMO

You can change Master Probability by holding down the instrument select [BD] button and pressing the [SD] button, and then turning the [DECAY] knob to edit the value.

## PTN SETTING: NAME

Parameter	Explanation
NAME	Specifies the pattern name (maximum 16 characters).

## How to enter characters

### 1. Use the [VALUE] knob to select "NAME."



### 2. Press the [VALUE] knob to access the character input screen.



### 3. Use the [COPY] (left) or [UTILITY] (right) button to move the cursor.



Button	Explanation
[UTILITY] button	Moves to the right.
[COPY] button	Moves to the left.

### 4. Use the [VALUE] knob to change the character.

Button	Explanation
[SHIFT] button + [COPY] button	Deletes one character (Erase).
[SHIFT] button + [UTILITY] button	Inserts one character (Insert).
[SHIFT] button + [VALUE] knob	Switches between uppercase/lowercase/numerals.

### 5. When you've finished inputting characters, press the [VALUE] knob.

If you decide to cancel, press the [EXIT] button.

### Saving the Pattern, Kit, or System Settings (WRITE)

Here's how to save a pattern or kit.

1. Hold down the [SHIFT] button and press the [EXIT] button.

The WRITE screen appears.



2. Use the [VALUE] knob to select what you want to save, and press the [VALUE] knob.

The WRITE screens appear in the order of "Overwrite" → "Pattern" → "Kit" → "System."

- \* If "System" is selected, a confirmation screen appears. Proceed to step 4.
- \* "Overwrite" saves the pattern and kit simultaneously. Proceed to step 4.

3. Use the [VALUE] knob to select the save-destination, and press the [VALUE] knob.

A confirmation message appears.



4. To save, use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

### Shortcuts for save operations


Operation	Operating the Unit
Save a pattern (PATTERN WRITE screen)	Hold down the [EXIT] button and press the [PTN SELECT] button.
Save a kit (KIT WRITE screen)	Hold down the [EXIT] button and press the [KIT] button.

### Copying a Pattern or Kit (COPY)

Here's how to copy a pattern or kit.

1. Press the [COPY] button.

The COPY screen appears.

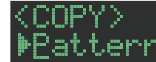

2. Use the [VALUE] knob to select what you want to copy, and press the [VALUE] knob.

The COPY screens appear in the order of "Pattern" → "Variation" → "Track" → "Kit" → "Inst."

3. Use the [VALUE] knob to select the copy-source, and press the [VALUE] knob.

4. Use the [VALUE] knob to select the copy-destination, and press the [VALUE] knob.

A confirmation message appears.



5. Use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

### Shortcuts for copy operations

Operation	Operating the Unit
Copy a pattern (PATTERN COPY screen)	Hold down the [COPY] button and press the [PTN SELECT] button.
Copy a kit (KIT COPY screen)	Hold down the [COPY] button and press the [KIT] button.
Copy an instrument (INST COPY screen)	Hold down the [COPY] button and press the [INST] button.
Copy a track	While holding down the [COPY] button, press the [BD]-[OH] button of the copy-source and copy-destination.

## Deleting a Pattern

1. Press the **[PTN SELECT]** button.
2. Hold down the **[CLEAR]** button and use the pads **[1]–[16]** to specify the pattern that you want to delete.

## Clearing a Variation

1. Press the **[VARIATION]** button.
2. Hold down the **[CLEAR]** button and use the pads **[A]–[H]** to select the variation that you want to clear.  
All steps of the specified variation are cleared.

## Clearing a Track

1. While holding down the **[CLEAR]** button, press the instrument select button **[BD]–[OH]** of the track that you want to clear.  
All steps of the selected track are cleared.  
This affects only the selected variation.

## Reloading a Pattern or Kit (Reload Function)

During playback or editing, here's how you can reload a pattern (return it to the saved state).

1. Hold down the **[UTILITY]** button and operate the controller whose value you want to load.

The screen shows the parameter and its value.

Moving the controller does not change the value.

Shortcut	Explanation
<b>[UTILITY] + [PTN SELECT]</b>	Load a pattern
When <b>[VARIATION]</b> is lit, <b>[UTILITY] + Pad [A]–[H]</b>	Load a variation
<b>[UTILITY] + [BD]–[OH]</b>	Load a track
<b>[UTILITY] + [SAMPLE] + [BD]–[OH]</b>	Load an instrument
<b>[UTILITY] + [SAMPLE] + [INST]</b>	Load all instruments

# Step Recording (TR-REC)

In this method of recording, you create a pattern by specifying the steps at which each track will sound. You can even play back the pattern while you're creating it.

\* If you want to keep the edits that you made to a pattern or kit, you must save that pattern or kit (p. 25).

## 1. Press the [TR-REC] button.



## 2. While holding down the [TR-REC] button, press a pad [A]–[H] to select a variation.

To select a FILL IN, hold down the [TR-REC] button and turn the [VALUE] knob.

## 3. Press one of the instrument select buttons [BD]–[OH] to select the track that you want to record.

## 4. Press pads [1]–[16] to input the steps at which you want sound to play.

## 5. Repeat steps 3–4.

### MEMO

You can change the scale. For details, refer to “Editing the Pattern Settings (Pattern Setting)” (p. 17).

## Entering Sub Steps or Flams

You can sub-divide a step and input sub steps within it.


## 1. Press the [SUB] button.

## 2. Press the pad [1]–[16] for which you want to specify a sub step.

You can enter sub steps, which divide a step into subunits that play multiple strikes.

By holding down the [SUB] button and turning the [VALUE] knob you can choose 1/2, 1/3, 1/4, or FLAM as the number of step divisions.

### Sub Step/Flam

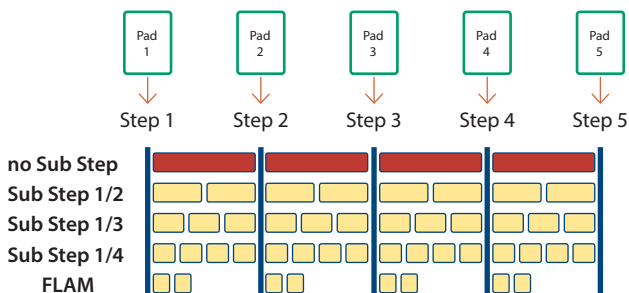

### MEMO

You can also input a sub step by holding down the [SUB] button and pressing a pad [1]–[16].

## Inputting Weak Beats

## 1. While holding down the [SHIFT] button, press a pad [1]–[16].

## Inputting Alternate Sounds (ALT INST)

For sounds whose name includes a "/" character, such as 707Bass1/2, you can input alternate sounds.

## 1. While holding down an instrument select button [BD]–[OH], press a pad [1]–[16].

### Alternate sounds

Although one sound is assigned to each pad, sounds (instrument's tones) whose name includes a "/" character, such as 707Bass1/2, are also assigned a second sound (alternate sound).

You can switch between normal sounds and alternate sounds for performance.

## Specifying Accents

## 1. Hold down the INST select [BD] button and press the [SD] button.

## 2. Press pads [1]–[16] to select the steps at which you want to add an accent.

## 3. Use the [TUNE] knob to adjust the volume of the accent.

## Deleting a Recorded Step from the Track

### Deleting only a portion

If you press the [CLEAR] button during playback, steps of the track selected by the instrument select buttons are deleted from the pattern while you continue holding down the button.

### Deleting all

While holding down the [CLEAR] button, press the instrument select button of the track that you want to clear.

## Setting the Probability (PROB, SUB PROB)

This shows how to set the probability for notes to play back. You can use the probability feature to make a pattern play in different variations, while that same pattern keeps playing back. Use sub step probability to set the ratio of sub steps that actually play back.

## 1. Long-press pads [1]–[16].

The MOTION/VELOCITY input screen is shown.

## 2. While holding down the pad you pressed in step 1, press the [COPY] or [UTILITY] button to select either PROB or SUB PROB.

\* If a probability is not set for the selected step (pad), the value is shown as "----".

## 3. Use the [VALUE] knob to set the probability for steps to play back.

\* Hold down the pad you pressed in step 1 and press the [CLEAR] button to delete the probability for the specified step (pad).

# Realtime Recording (INST REC)

In this method of recording, you create a pattern by realtimerecording your performance on pads [1] (BD)–[6] (OH). This modifies the selected pattern.

Operations of the various knobs are also recorded as motion data.

\* If you want to keep the edits that you made to a pattern or kit, you must save that pattern or kit (p. 25).

1. Press the **[VARIATION]** button to make it light, and press a pad **[A]–[H]** to select the variation that you want to record.
2. Press the **[INST REC]** button.



INST REC: 1-010  
Berlin Flyover

3. Press the **[START/STOP]** button to start recording.
4. Perform using pads **[1] (BD)–[6] (OH)**.

\* You can record operations of the instrument edit section's **[TUNE]** knob, **[DECAY]** knob, and **[CTRL]** knob.

## Performing/Recording Sub Steps and Flams

Here's how to perform/record sub steps or flams.

1. Press the **[SUB]** button.
2. Press the pad **[1] (BD)–[6] (OH)** for which you want to perform/record a sub step or flam.

### MEMO

By holding down the **[SUB]** button and turning the **[VALUE]** knob you can choose from 1/2, 1/3, 1/4, or FLAM as the number of step divisions.

You can also perform a sub step or flam by holding down the **[SUB]** button and pressing the pads **[1] (BD)–[6] (OH)**.

## Playing/Recording Weak Beats (WEAK BEATS)

1. While holding down the **[SHIFT]** button, press a pad **[1] (BD)–[6] (OH)**.

This lets you play or record weak beats.

## Playing/Recording Alternate Sounds (ALT INST)

For sounds whose name includes a "/" character, such as 707Bass1/2, you can play or record alternate sounds.

1. While holding down an instrument select button **[BD]–[OH]**, press a pad **[1] (BD)–[6] (OH)**.

## Deleting a Recorded Step from the Track

### Deleting only a portion

If you press the **[CLEAR]** button during playback, steps of the track selected by the instrument select buttons **[BD]–[OH]** are deleted from the pattern while you continue holding down the button.

### Deleting all

While holding down the instrument select button **[BD]–[OH]** of the track that you want to delete, press the **[CLEAR]** button.

# Playing the Pads (INST PLAY)

You can use pads [1] (BD)–[6] (OH) to perform in real time.

Your performance does not modify the pattern.

1. Hold down the **[SHIFT]** button and press the **[INST REC]** button.

The [INST REC] button blinks green.

```
INST PLAY: 1-010  
Berlin Flyover
```

2. Play the pads **[1](BD)–[6](OH)**.

## Performing Sub Steps and Flams

Here's how to play sub steps or flams.

1. Press the **[SUB]** button.
2. Press the pad **[1](BD)–[6](OH)** for which you want to perform a sub step or flam.

### MEMO

By holding down the **[SUB]** button and turning the **[VALUE]** knob you can choose from 1/2, 1/3, 1/4, or FLAM as the number of step divisions.

You can also perform a sub step or flam by holding down the **[SUB]** button and pressing the pads **[1](BD)–[6](OH)**.

## Performing Weak Beats (WEAK BEATS)

1. While holding down the **[SHIFT]** button, press a pad **[1] (BD)–[6] (OH)**.

This lets you perform weak beats.

## Performing Alternate Sounds (ALT INST)

For sounds whose name includes a "/" character, such as 707Bass1/2, you can perform alternate sounds.

1. While holding down an instrument select button **[BD]–[OH]**, press a pad **[1] (BD)–[6] (OH)**.

## Performing a Roll (ROLL)

Here's how to perform a roll on an instrument's tone.

1. While holding down a pad **[7]–[8]**, press a pad **[1] (BD)–[6] (OH)**.

This lets you perform a roll on the instrument's tone.

If you hold down the **[SHIFT]** button and **[INST REC]** button, and press a pad **[7]–[8]**, the roll function is held. To defeat the hold, press a pad **[7]–[8]**.

## Roll speed

Pad	Explanation
Pad [7]	Sixteenth note
Pad [8]	Thirty-second note
Pad [7] + [8]	Sixty-fourth note

# Looping a Specific Step (STEP LOOP)

While a pattern is playing back, you can make the selected step play as a loop.

All instruments sounded by the selected step play as a loop.

**1. Press the [START/STOP] button to play the pattern.**

**2. Press the [STEP LOOP] button.**

The [STEP LOOP] button lit, and the unit is in step loop mode.

**3. Press the pad [1]–[16] of the step that you want to loop.**

The selected step begins looping.

When you take your finger off the pad [1]–[16], you return to pattern playback.

## Holding the Loop Playback

You can make a step's loop playback continue even after you release your finger.

**1. While holding down either the [STEP LOOP] button or one of the instrument select buttons [BD]–[OH], press a pad [1]–[16].**

The loop playback continues even after you release your finger.

**2. To cancel looping, press the [STEP LOOP] button or one of the pads.**

## Playing a Step as a Roll

You can divide up a selected step and make it play back as a roll.

**1. Press a pad from [1]–[16] corresponding to the step that you want to play back in a loop.**

The selected steps starts playing back in a loop.

**2. While the loop is playing back, turn the [VALUE] knob or press the [SUB] button.**

This lets you divide up the selected step and make it play back as a roll.

The number of divisions changes in order as follows: "1" (no roll) → "1/2" (duplet) → "1/4" (quadruplet).

**3. Take your finger off pads [1]–[16].**

The unit returns to pattern playback.

\* The number of divisions is reset to "1" (no roll) when you take your finger off pads [1]–[16].

## To Cancel Step Loop Mode

Press any one of the [PTN SELECT], [TR-REC], [INST REC], or [VARIATION] buttons.

# Editing a Kit's Settings (KIT Edit)

## Selecting kits (KIT)

Here's how to select kits.

### 1. Press the [KIT] button to make it light.

The KIT screen appears.



```
KIT: *001
Kit_001_____
```

If the kit is being edited, an "\*" is shown at the left side of the kit number.

### 2. Use the [VALUE] knob to select a kit.


### 3. Press the [KIT] button once again.

The [KIT] button goes dark, and you exit the KIT screen.

## Copying a kit (KIT COPY)

### 1. Hold down the [COPY] button and press the [KIT] button.

The KIT COPY screen appears.



```
KIT COPY: Src
▶001 → 001
```

### 2. Use the [VALUE] knob to select the copy-source, and press the [VALUE] knob.

### 3. Use the [VALUE] knob to select the copy-destination, and press the [VALUE] knob.

A confirmation message appears.

### 4. To copy, use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

## Grouping instruments

You can create a group of multiple instruments and play their layered sound with a single note.

Specify one instrument as the "master instrument," and specify the instruments that you want to follow the master instrument as "slave instruments." The master instrument and the instruments that you select as slave instruments are the "instrument group."

An instrument group can be used in the following states.

- Step input in "TR-REC"
- Pad performance in "INST PLAY"
- Pad recording in "INST REC"

### 1. Hold down the [SHIFT] button and press the [KIT] button.

### 2. Long-press the [BD]-[OH] button that you want to specify as the master instrument.

The INST GROUP screen appears.



```
INST GROUP: BD
M
v
```

### 3. While holding down the button that you pressed in step 2, press the [BD]-[OH] button that you want to specify as the slave instrument.

#### MEMO

- During TR-REC, when you press a grouped [BD]-[OH] button, the [BD]-[OH] button of the master instrument (M) lights and the [BD]-[OH] button of the slave instrument (v) blinks.
- During INST PLAY/INST REC, pressing a pad [BD]-[OH] of a grouped slave instrument does not produce sound.

Here's how to edit the settings of the currently selected kit.

\* If you want to keep the edited kit settings, you must save the kit (p. 25).

### 1. Hold down the [SHIFT] button and press the [KIT] button.

The KIT Edit screen appears.



```
KIT:
▶Level 0.0dB
```

### 2. Select a parameter.

#### 2-1. Use the [VALUE] knob to select a parameter.

#### 2-2. Press the [VALUE] knob.

Proceed to editing the parameter value (step 3).

### 3. Modify values.

#### 3-1. Use the [VALUE] knob to edit the parameter value.

#### 3-2. Press the [VALUE] knob.

Return to selecting a parameter (step 2).

### 4. Press the [KIT] button.

Exit the KIT Edit screen.

#### MEMO

For details on the KIT parameters, refer to "Parameter Guide (English)" (PDF).



## How to enter characters

1. Use the [VALUE] knob to select "NAME:"

BKIT:NAME  
 ▶Kit\_001\_\_\_\_\_

2. Press the [VALUE] knob to access the character input screen.

BKIT NAME:  
 Kit\_001\_\_\_\_\_

Controller	Explanation
[VALUE] knob	Change the character.
[UTILITY] button	Moves to the right.
[COPY] button	Moves to the left.
[SHIFT] button + [COPY] button	Deletes one character (Erase).
[SHIFT] button + [UTILITY] button	Inserts one character (Insert).
[SHIFT] button + [VALUE] knob	Switches between uppercase/lowercase/numerals.

3. When you've finished inputting characters, press the [VALUE] knob.

## Saving the Pattern, Kit, or System Settings (WRITE)

Here's how to save a pattern or kit.

1. Hold down the [SHIFT] button and press the [EXIT] button.

The WRITE screen appears.

<WRITE>  
 ▶Pattern

2. Use the [VALUE] knob to select what you want to save, and press the [VALUE] knob.

The WRITE screens appear in the order of "Overwrite" → "Pattern" → "Kit" → "System."

- \* If "System" is selected, a confirmation screen appears. Proceed to step 4.
- \* "Overwrite" saves the pattern and kit simultaneously. Proceed to step 4.

3. Use the [VALUE] knob to select the save-destination, and press the [VALUE] knob.

A confirmation message appears.

Pattern Write?  
 [Cancel] [OK]

4. Use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

## Shortcuts for save operations

Operation	Operating the Unit
Save a pattern (PATTERN WRITE screen)	Hold down the [EXIT] button and press the [PTN SELECT] button.
Save a kit (KIT WRITE screen)	Hold down the [EXIT] button and press the [KIT] button.


# Editing an Instrument's Sound (INST Edit)

## Selecting an Instrument's Tone (INST)

Instrument's tones of the currently selected kit are selected individually.

### 1. Press the [INST] button.

The [INST] button and the [BD]–[OH] button (that had been selected for [TR-REC]) are lit, and the INST screen appears.



### 2. Use the [VALUE] knob to select the instrument's tone.

#### MEMO

- To switch categories, hold down the [SHIFT] button and turn the [VALUE] knob.
- By holding down the [VALUE] knob and turning the [VALUE] knob, you can move through the instrument tones in steps of 10.
- When you press the [VALUE] knob, the category name is enclosed by “[ ]” and you can switch between instrument tones with the category locked (category lock). When you press the [VALUE] knob once again, category lock is cleared. You can specify category lock for each instrument, and that setting is saved in the kit.



### 3. Press the [INST] button once again.

The [INST] button goes dark, and you exit the INST screen.

## About the icons shown in the INST screen



	Preset:	Tones originally in the TR-6S
	Sample:	Tones that use samples
	Loop:	Tones that play repeatedly
	User:	Tones that use imported samples
	FM:	Tones that use the FM tone generator

## Searching for instrument tones

1. Hold down the [KIT] button and press the [INST] button.
2. Use the [VALUE] knob to select the tone type (ACB, FM), and then press the [VALUE] knob.
3. Use the [VALUE] knob to select the instrument's tone.

### 1. Hold down the [SHIFT] button and press the [INST] button.

The INST Edit screen appears.



### 2. Select a parameter.

- 2-1. Use the [VALUE] knob to select a parameter.
- 2-2. Press the [VALUE] knob.

### 3. Modify values.

- 3-1. Use the [VALUE] knob to edit the value.
- 3-2. Press the [VALUE] knob.

Return to the parameter selection (step 2).

### 4. Press the [INST] button.

Exit the INST Edit screen.

#### MEMO

For details on the INST parameters, refer to “Parameter Guide (English)” (PDF).

# Importing or Exporting a Pattern or Kit

## Exporting a Pattern or Kit

Here's how you can export a kit or pattern to an SD card.

### Exporting a Pattern

1. Insert the SD card into the TR-6S.
2. Press the [UTILITY] button to make it light.  
The Utility screen appears.
3. Use the [VALUE] knob to select "UTILITY:Export," and then press the [VALUE] knob.




UTILITY:  
▶Export >

4. Use the [VALUE] knob to select "Pattern," and then press the [VALUE] knob.
5. Use the [VALUE] knob to select the pattern that you want to export, and then press the [VALUE] knob.


You may select multiple patterns.

A check mark appears at the left of the pattern number(s) that will be exported.



EXPORT: v1-01▶ 1  
[Berlin Flyover]

6. Hold down the [SHIFT] button and press the [VALUE] knob, and input a name for the file that will be exported.



EXPORT:NAME  
tr8s\_ptn .t8p

Controller	Explanation
[VALUE] knob	Change the character.
[UTILITY] button	Moves to the right.
[COPY] button	Moves to the left.
[SHIFT] button + [COPY] button	Deletes one character (Erase).
[SHIFT] button + [UTILITY] button	Inserts one character (Insert).
[SHIFT] button + [VALUE] knob	Switches between uppercase/lowercase/numerals.

7. Press the [VALUE] knob.

A confirmation message appears.



Export?  
[Cancel] [OK]

8. Use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

When export is completed, the display indicates "Completed!," and you exit the UTILITY screen.

### Exporting a Kit

1. Insert the SD card into the TR-6S.
2. Press the [UTILITY] button to make it light.  
The Utility screen appears.
3. Use the [VALUE] knob to select "UTILITY:Export," and then press the [VALUE] knob.




UTILITY:  
▶Export >

4. Use the [VALUE] knob to select "Kit," and then press the [VALUE] knob.
5. Use the [VALUE] knob to select the kit that you want to export, and then press the [VALUE] knob.

You may select multiple kits.

A check mark appears at the left of the kit number(s) that will be exported.

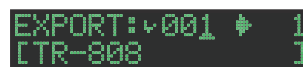

EXPORT: v001 ▶ 1  
[TR-808]

6. Hold down the [SHIFT] button and press the [VALUE] knob, and input a name for the file that will be exported.




EXPORT:NAME  
tr8s\_kit .t8k

Controller	Explanation
[VALUE] knob	Change the character.
[UTILITY] button	Moves to the right.
[COPY] button	Moves to the left.
[SHIFT] button + [COPY] button	Deletes one character (Erase).
[SHIFT] button + [UTILITY] button	Inserts one character (Insert).
[SHIFT] button + [VALUE] knob	Switches between uppercase/lowercase/numerals.

7. Press the [VALUE] knob.

A confirmation message appears.



Export?  
[Cancel] [OK]

8. Use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

When export is completed, the display indicates "Completed!," and you exit the UTILITY screen.

### Importing a Pattern or Kit

Here's how you can import a saved kit or pattern from an SD card.

File formats that can be imported

- Backup files created by the TR-6S
- Export files created by the TR-6S

#### NOTE

Simply executing the import does not save the kit or pattern in internal memory, so it will be lost when you turn off the power. After importing, execute **"Saving the Pattern, Kit, or System Settings (WRITE)"** (p. 25) to save the kits and patterns if necessary.

### Importing a Pattern

1. Insert the SD card into the TR-6S.
2. Press the [UTILITY] button to make it light.

The Utility screen appears.

3. Use the [VALUE] knob to select **"UTILITY:Import,"** and then press the [VALUE] knob.

```
UTILITY:
▶Import >
```

4. Use the [VALUE] knob to select **"Pattern,"** and then press the [VALUE] Knob.
5. Use the [VALUE] knob to select the data format of the file that contains the pattern you want to import, and then press the [VALUE] knob.

```
PTN IMPORT:
Src BACKUP w/Kit
```

Format	Explanation
BACKUP w/Kit	Import from a backup file (including the kit specified by the pattern that you import)
BACKUP	Import from a backup file (only the pattern)
EXPORT w/Kit	Import from an export file (including the kit specified by the pattern that you import)
EXPORT	Import from an export file (only the pattern)

6. Use the [VALUE] knob to select the file that you want to import, and then press the [VALUE] knob.

```
PTN IMPORT:
tr8s_bak.bin
```

7. Use the [VALUE] knob to select the pattern that you want to import, and then press the [VALUE] knob.

```
SRC: 1-01(021)
Pattern Name
```

#### MEMO

If the data format you're importing is BACK w/Kit or EXPORT w/Kit, you can press the [KIT] button to see the name of the kit that's specified by the currently selected pattern.

8. Use the [VALUE] knob to select the import-destination, and then press the [VALUE] knob.

```
DST: 1-01: 021
Berlin Flyover
```

9. If the data format you're importing is BACK w/Kit or EXPORT w/Kit, you can further use the [VALUE] knob to select the import destination for the kit, and then press the [VALUE] knob.

```
DST: 1-01: 021
808 Berlin
```

A confirmation message appears.

```
Import?
[Cancel] [OK]
```

10. To execute, use the [VALUE] knob to select **"OK,"** and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

When the import is completed, the display indicates "Completed!" and you exit the UTILITY screen.

## Importing a Kit

1. Insert the SD card into the TR-6S.
2. Press the [UTILITY] button to make it light.

The Utility screen appears.

3. Use the [VALUE] knob to select "UTILITY:Import," and then press the [VALUE] knob.

```
UTILITY:
▶Import >
```

4. Use the [VALUE] knob to select "Kit," and then press the [VALUE] knob.
5. Use the [VALUE] knob to select the data format of the file that contains the kit you want to import, and then press the [VALUE] knob.

```
KIT IMPORT:
Src BACKUP
```

Format	Explanation
BACKUP	Import from a backup file
EXPORT	Import from an export file
EXPORT (Ptn)	Import from kit data that is included in a pattern export file

6. Use the [VALUE] knob to select the file that you want to import, and then press the [VALUE] knob.

```
KIT IMPORT:
tr8s_bak.bin
```

7. Use the [VALUE] knob to select the kit that you want to import, and then press the [VALUE] knob.

```
SRC: 001
TR-808
```

8. Use the [VALUE] knob to select the import-destination, and then press the [VALUE] knob.

```
DST: ▶ 001
TR-808
```

A confirmation message appears.

```
Import?
[Cancel] [OK]
```

9. To execute, use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

When the import is completed, the display indicates "Completed!" and you exit the UTILITY screen.

# Assigning an Imported User Sample to an Instrument

You can import your own audio files into this unit, and play them.

## Importing a User Sample (SAMPLE Import)


Here's how an audio file saved on an SD card can be imported as a user sample.

- \* Use the TR-6S to format the SD card.
- \* The maximum time length of a single audio file is approximately 180 seconds (in the case of 44.1 kHz/mono), and a maximum of 400 files can be imported. Depending on memory usage, the maximum time and maximum number might be less.

### 1. Using your computer, copy an audio file to the following folder of the SD card.

ROLAND\TR-6S\SAMPLE\

If you want to import multiple audio files in a single operation, create another folder inside the above folder, and place the audio files in it.

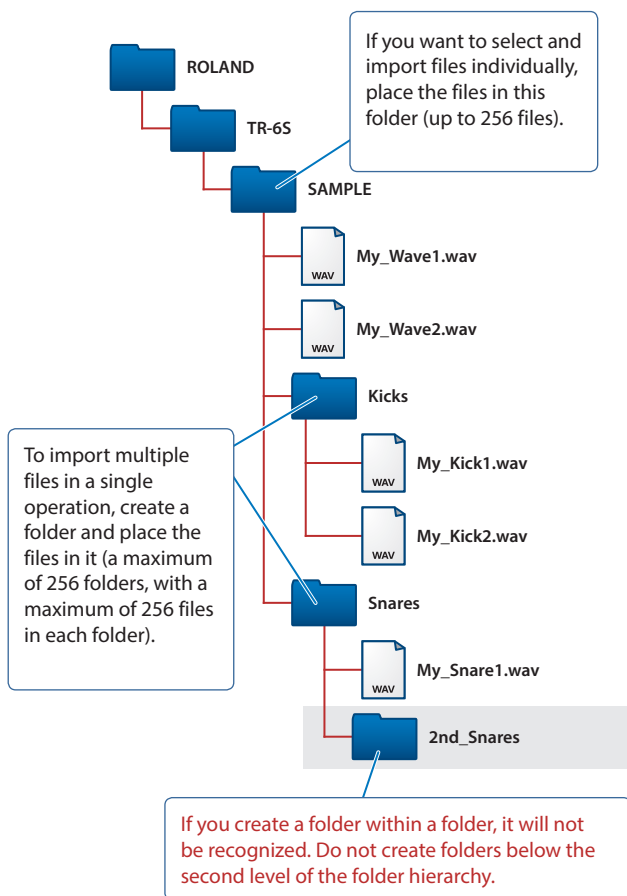

2. Insert the SD card into the TR-6S.
3. Press the [UTILITY] button to make it light.
4. Use the [VALUE] knob to select "SAMPLE:Import," and then press the [VALUE] knob.

```
SAMPLE IMPORT:
Src          FILE
```

5. Use the [VALUE] knob to select "FILE" or "FOLDER," and then press the [VALUE] knob.

Item	Explanation
FILE	Select and import audio files individually.
FOLDER	Import all the audio files in the specified folder.

6. Use the [VALUE] knob to select the audio file that you want to import, and press the [VALUE] knob.

A confirmation message appears.

```
Import?
[Cancel] [OK]
```

### MEMO

- When you select an audio file, the [SAMPLE] button blinks. If you press the [SAMPLE] button in this state, the selected audio file plays, allowing you to audition the sounds while you select an audio file.
- If you select a folder, all the audio files in that folder are imported together.

7. To execute, use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

When the import is completed, the display indicates "Completed!" and you exit the UTILITY screen.

## Audio files that can be imported

### File format

WAV, AIFF

### Sampling frequency

WAV: up to 96 kHz

AIFF: 44.1 kHz, 48 kHz, 96 kHz

### Bit depth

8bit, 16bit, 24bit, 32bit, 32bit float

### Channel count

Mono, stereo

## Assigning a User Sample to an Instrument (SAMPLE)

1. Press the instrument select button [BD]–[OH] to which you want to assign the user sample.
2. Press the [SAMPLE] button.

The [SAMPLE] button is lit, and the SAMPLE screen appears.



When you select an instrument for which a sample is selected, the sample name is shown.

3. Use the [VALUE] knob to select the user sample that you want to assign as the instrument's tone.



### MEMO

- Choose from the user sample ( [icon] icon) that you imported from the SD card.
- You can press a [BD]–[OH] button to change the loading-destination.

4. Press the lit [SAMPLE] button.

The [SAMPLE] button goes dark, and you exit the SAMPLE screen.

### Icons appearing in the SAMPLE screen




- [icon] Preset: Samples originally in the TR-6S
- [icon] User: Imported samples
- [icon] Loop: Samples that play repeatedly

## Editing a User Sample Tone's Settings (SAMPLE Edit)

1. Hold down the [SHIFT] button and press the [SAMPLE] button.

The SAMPLE Edit screen appears.



2. Select a parameter.

- 2-1. Use the [VALUE] knob to select a parameter.
- 2-2. Press the [VALUE] knob.

3. Modify values.

- 3-1. Use the [VALUE] knob to edit the parameter value.
- 3-2. Press the [VALUE] knob.

Return to the parameter selection (step 2).

### NOTE

If the screen indicates "---", editing is not possible.

4. Press the [SAMPLE] button.

Exit the SAMPLE Edit screen.

If you had edited the settings, a screen asks whether you want to save the sample.

### MEMO

- The settings you specify here are common to all kits that use the same user sample.
- If an ACB tone or a preset sample (a sample indicated by a [icon] icon) is assigned to the instrument, the parameter value is shown as "---" and cannot be edited.

Parameter	Value	Explanation
Start	(number of samples, in steps of 10 samples)	Specify the locations at which playback starts and ends.
End		
Gain	-18dB–0dB–+18dB	Specifies the playback gain.
Category	IMPORT, BD, SD, TOM, RS, HC, CH/OH, CC/RC, PERC1, PERC2, PERC3, PERC4, PERC5, FX/HIT, VOICE, SYNTH1, SYNTH2, BASS, SCALED, CHORD, OTHERS, USER01–32	Specifies the category used when selecting a tone.
Name	Specifies the sample name (maximum 16 characters).	

### Deleting a User Sample (SAMPLE Delete)

1. Press the [UTILITY] button to make it light.
2. Use the [VALUE] knob to select "SAMPLE:Delete," and then press the [VALUE] knob.
3. Use the [VALUE] knob to select the user sample that you want to delete, and then press the [VALUE] knob to apply a check mark.
4. Use the [VALUE] knob to select "Delete."  
"Delete" appears after the last sample.
5. Press the [VALUE] knob.  
A confirmation message appears.

```
Delete?
[Cancel] [OK]
```

#### MEMO

- After applying a check mark in step 3, you can also move to the confirmation message by holding down the [SHIFT] button and pressing the [VALUE] knob.
  - Preset samples cannot be deleted.
6. To execute, use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

When the delete is completed, the display indicates "Completed!" and you exit the UTILITY screen.

### Renaming a User Category (Category Name)

Here's how to rename a user category.

1. Press the [UTILITY] button to make it light.
2. Use the [VALUE] knob to select "SAMPLE: Category Name," and then press the [VALUE] knob.  
The user category select screen appears.

```
CATEGORY: NAME▶01
```

3. Use the [VALUE] knob to select the user category number (01–32) whose name you want to edit, and then press the [VALUE] knob to access the character input screen.
4. Edit the name.

Controller	Explanation
[VALUE] knob	Change the character.
[UTILITY] button	Moves to the right.
[COPY] button	Moves to the left.
[SHIFT] button + [COPY] button	Deletes one character (Erase).
[SHIFT] button + [UTILITY] button	Inserts one character (Insert).
[SHIFT] button + [VALUE] knob	Switches between uppercase/lowercase/numerals.

5. When you finish editing, press the [VALUE] knob.

#### MEMO

To save your edits, go to the SYSTEM settings and execute the WRITE operation (p. 25).

### Optimizing the User Sample Area (OPTIMIZE)

Here's how to optimize the user sample area.

If you repeatedly import and delete user samples, the user sample area might become fragmented, reducing the number of samples that can be loaded.

This function lets you take full advantage of the user sample area when importing samples.

#### NOTE

- Be sure to back up before executing this operation.
- This process might take several tens of minutes (the required time depends on the number and size of user samples).
- Never turn off the power during this process. User samples might be lost if you do so.
- In some cases, optimization might not have an effect.

1. Press the [UTILITY] button to make it light.
2. Use the [VALUE] knob to select "SAMPLE:Optimize," and then press the [VALUE] knob.

The free area (Free) and the fragmented proportion (Fragment) are shown.

```
Free:      100%
Fragment:  0%
```

If the Fragment (fragmentation) value is other than 0%, fragmentation has occurred.

If you decide to choose, press the [UTILITY] button to exit the UTILITY screen.

3. Press the [VALUE] knob.

A confirmation message appears.

```
Optimize?
[Cancel] [OK]
```

4. To execute, use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

When optimization is completed, the display indicates "Completed!" and you exit the UTILITY screen.



# Convenient Functions and Settings (UTILITY)

Here's how to make system settings for the TR-6S itself, or back up and restore data.

## 1. Press the [UTILITY] button to make it light.

The setting screen appears.



```
GENERAL:
▶LCD Contrast 5
```

## 2. Select a parameter.

**2-1.** Use the [VALUE] knob to select a parameter.

**2-2.** Press the [VALUE] knob.

If a ">" is shown at the right of the parameter name, an additional parameter select screen appears following step

**2-2** In this case, repeat steps **2-1.** and **2-2** to proceed to step 3.

## 3. Modify values.

**3-1.** Use the [VALUE] knob to edit the parameter value.

**3-2.** Press the [VALUE] knob.

Return to the parameter selection (step 2).

## 4. Press the lit [UTILITY] button.

The [UTILITY] button goes dark, and you exit the UTILITY screen.

### MEMO

To save your edits, go to the SYSTEM settings and execute the WRITE operation (p. 25).

## SYSTEM Parameters / UTILITY Menu

### GENERAL

Specify overall settings.

### RELOAD

Reload patterns or kits.

### SAMPLE

Manage samples.

### LED

Specify LED illumination settings.

### SYNC/TEMPO

Make settings related to tempo and synchronization.

### MIDI

Make settings related to MIDI.

### SOUND

Turn the local switch on/off.

### UTILITY

Initialize or back up.

### SD CARD

Format an SD card.

### INFORMATION

Show the system version.

### MEMO

For details on the SYSTEM parameters and the UTILITY menu, refer to "Parameter Guide (English)" (PDF).

# Initializing, Backing-Up, Restoring

## Returning to the Factory Settings (FACTORY RESET)

Here's how to return the TR-6S to its factory-set state.

### NOTE

Be aware that when you execute FACTORY RESET: ALL, the user sample tones and user sample data are also erased.

1. Press the [UTILITY] button to make it light.

The UTILITY screen appears.

2. Use the [VALUE] knob to select "UTILITY: Factory Reset."

```
UTILITY:
▶Factory Reset >
```

3. Press the [VALUE] knob.

The target select screen appears.

```
FACTORY RESET:
Target          ALL
```

Target	Explanation
ALL	Returns all settings including patterns and kits to their factory-set state.
KIT	Returns only the kit settings to their factory-set state.
PTN	Returns only the patterns to their factory-set state.

### MEMO

You can also access the target select screen by holding down the [CLEAR] button while you turn on the power.

4. Use the [VALUE] knob to select the target, and press the [VALUE] knob.

A confirmation message appears.

```
Factory Reset?
[Cancel] [OK]
```

5. To execute, use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

6. When the display indicates "Completed. Turn off power," turn the TR-6S's power off and on again.

## Backing Up Data to SD Card (BACKUP)

- \* If you want to make a backup, save the data (patterns, kits, system settings) before you proceed. The backup will not include the pattern or kit that you're currently editing (shown by an "\*" indication) or system settings that you have not saved.

1. Insert the SD card into the TR-6S.

2. Press the [UTILITY] button to make it light.

The UTILITY screen appears.

3. Use the [VALUE] knob to select "UTILITY: Backup."

```
UTILITY:
▶Backup >
```

4. Press the [VALUE] knob.

The BACKUP:NAME screen appears.

```
BACKUP:NAME
tr8s_bak .bin
```

### MEMO

If a backup file already exists, the BACKUP:SELECT screen appears.

```
BACKUP:SELECT
Save As
```

To overwrite-save, select the existing backup file and press the [VALUE] knob.

If you select Save As and press the [VALUE] knob, the BACKUP:NAME screen appears.

5. Edit the name if necessary.

Controller	Explanation
[VALUE] knob	Change the character.
[UTILITY] button	Moves to the right.
[COPY] button	Moves to the left.
[SHIFT] button + [COPY] button	Deletes one character (Erase).
[SHIFT] button + [UTILITY] button	Inserts one character (Insert).
[SHIFT] button + [VALUE] knob	Switches between uppercase/lowercase/numerals.

6. When you've finished inputting characters, press the [VALUE] knob.

A confirmation message appears.

```
Backup?
[Cancel] [OK]
```

7. To execute, use the [VALUE] knob to select "OK," and press the [VALUE] knob.

If you decide to cancel, use the [VALUE] knob to select "Cancel," and then press the [VALUE] knob.

## Restoring Data That Was Backed Up to SD Card (RESTORE)

1. Insert the SD card into the TR-6S.
2. Press the **[UTILITY]** button to make it light.  
The UTILITY screen appears.
3. Use the **[VALUE]** knob to select **"UTILITY: Restore."**

```
UTILITY:
▶Restore >
```

4. Press the **[VALUE]** knob.  
The RESTORE screen appears.

```
RESTORE:
tr8s_bak.bin
```

5. Use the **[VALUE]** knob to select the file that you want to restore.
6. Press the **[VALUE]** knob.

A confirmation message appears.

```
Restore?
[Cancel] [OK]
```


7. To execute, use the **[VALUE]** knob to select **"OK,"** and press the **[VALUE]** knob.  
If you decide to cancel, use the **[VALUE]** knob to select "Cancel," and then press the **[VALUE]** knob.
8. When the display indicates **"Completed. Turn off power."** turn the TR-6S's power off and on again.

# Synchronizing/Recording with Other Devices

The TR-6S can receive MIDI Clock (F8) data to synchronize its tempo. It can also receive MIDI Start (FA) and MIDI Stop (FC) to start/stop itself.


## Synchronizing with a DAW (TR-6S as Slave)

You can synchronize the TR-6S with your DAW by connecting it to your computer via a commercially available USB cable.

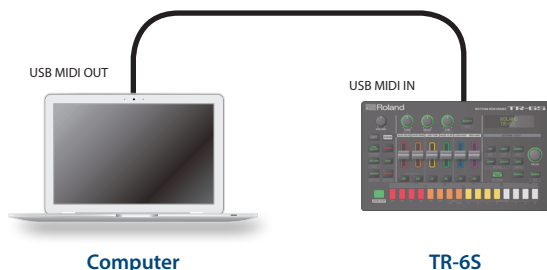

## Synchronizing with a MC-101 (TR-6S as Master)

You can synchronize the TR-6S with a MC-101 by using a commercially available MIDI cable to make connections.

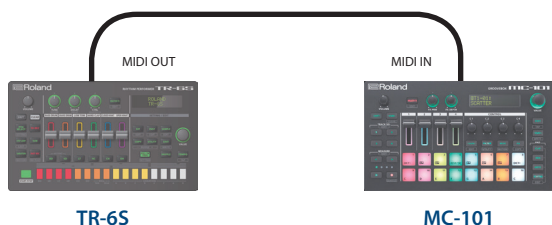

## Using the TR-6S as a MIDI Controller

You can use the TR-6S as a controller for your computer software without using the sounds of the TR-6S's internal sound engine.

1. Press the **[UTILITY]** button to make it light.

The setting screen appears.

```
GENERAL:  
▶LCD Contrast 5
```

2. Use the **[VALUE]** knob to select "MIDI: Tx EditData," and then press the **[VALUE]** knob.
3. Use the **[VALUE]** knob to select "ON," and then press the **[VALUE]** knob.
4. Use the **[VALUE]** knob to select "SOUND: Local Sw," and then press the **[VALUE]** knob.

```
SOUND:  
LocalSw▶ ON
```

5. Use the **[VALUE]** knob to select "SURFACE," and then press the **[VALUE]** knob.

```
SOUND:  
LocalSw▶SURFACE
```

6. Press the lit **[UTILITY]** button.

The **[UTILITY]** button goes dark, and you exit the UTILITY screen.

\* Even if you press pads or if MIDI is received, the TR-6S's internal sound engine does not produce sound.

## Connecting a Computer via USB

If you use a commercially available USB 2.0 cable to connect the TR-6S to your computer, you can synchronize the TR-6S with your DAW via USB MIDI, or record individual instruments of the TR-6S onto tracks of your DAW via USB audio.

In order to use the TR-6S, you'll need to download the driver from the following URL and install it on your computer.

For details on installation, refer to the following URL.

➔ <https://www.roland.com/support/>

### NOTE

Do not connect the TR-6S to your computer before you have finished installing the driver.

If you have already connected the TR-6S, disconnect it, and then reconnect it after driver installation is completed.

## Using a Computer to Manage the Connected SD Card (STORAGE MODE)

By connecting in Storage mode, you can use your computer to manage the contents of an SD card that's inserted in the TR-6S.

1. With the power turned off, use a commercially available USB cable to connect the TR-6S to the USB port of your computer.
2. While holding down the **[SAMPLE]** button, power-on the TR-6S.

The screen of the TR-6S indicates "STORAGE MODE," and the TR-6S stops responding to operations.

The SD card inserted in the TR-6S is mounted on your computer.

```
STORAGE MODE
```

3. When disconnecting, perform the operation on your computer to safely remove the connected device, and then power-off the TR-6S.

# Error Message List

Display	Meaning	Action
SDCard NotReady!	The SD card is not inserted, or is inserted incompletely.	Turn off the unit, firmly insert the SD card, and then turn on the unit once again.
	The SD card was removed after you selected data that was on the SD card.	
	The format of the SD card is invalid.	Use the TR-6S to format the SD card (p. 7).
Read Error!	Data could not be read from the SD card.	Make sure that the SD card is correctly inserted.
	The file is damaged.	Do not use this file.
Write Error!	Data could not be written to the SD card.	Make sure that the SD card is correctly inserted.
	The format of the SD card is invalid.	Use the TR-6S to format the SD card (p. 7).
SD Card Full!	There is insufficient space on the SD card.	Delete unneeded data.
Sys Mem Damaged!	The contents of the TR-6S's save area may be damaged.	Execute the factory reset operation (p. 34). If this does not solve the problem, contact your dealer or customer support.
MIDI Buff Full!	An unusually large amount of MIDI data was received, and could not be processed.	Reduce the amount of MIDI messages that are being transmitted.
MIDI Offline!	The MIDI IN connection was broken.	Check that there is no problem with the MIDI cable connected to the TR-6S's MIDI IN, and that the MIDI cable was not disconnected.
Program Error!	The TR-6S was unable to start up. The program could not be read correctly. Alternatively, the system update program may be invalid.	Use the correct program to perform the update once again. If this does not solve the problem, contact your dealer or customer support.
Now Playing!	Since the TR-6S is playing, this operation cannot be executed.	Stop playback before you execute the operation.
Now Recording!	Since the TR-6S is recording, this operation cannot be executed.	Stop recording before you execute the operation.
Not Found!	The file was not found on the SD card.	Make sure that the file exists on the SD card.
Not Supported!	The format of the audio file is not supported.	In order to load the file, you'll need to convert it to a supported format.
Too Long Size!	The audio file exceeds the supported number of samples.	In order to load the audio file, you'll need to shorten it (decrease the number of samples) or lower its sampling frequency.
No Space!	There is no free space in the user sample area.	Delete unneeded user samples to increase the amount of free space.
No Tone!	There is no enough free space to save the user sample tone settings.	Delete unneeded user samples to increase the amount of free space.

Display	Meaning	Action
!!CAUTION!! BATTERY LOW	The battery has run down.	Replace the battery, or use a USB cable to connect the unit to your computer.

# List of Shortcut Keys

## Switching Screens and Modes

Operation	Shortcut
Show the PTN SETTING screen	[SHIFT] + [PTN SELECT]
Show the KIT EDIT screen	[SHIFT] + [KIT]
Show the INST EDIT screen	[SHIFT] + [INST]
Show the SAMPLE EDIT SETTING screen	[SHIFT] + [SAMPLE]
Show the ERASE MOTION screen	Long-press [SHIFT] + [VARIATION]
Show the MOTION/ VELOCITY input screen	(in TR-REC mode) Long-press a pad [1]–[16]

## Showing the Value or Parameter Name of a Controller

Operation	Shortcut
Show the value of a level fader	[SHIFT] + Level fader
Show the value of a knob	[SHIFT] + Knob

## Inputting Characters

Operation	Shortcut
Erase one character (Erase)	[SHIFT] + [COPY]
Insert one character (Insert)	[SHIFT] + [UTILITY]
Switch between uppercase/lowercase/numerals	[SHIFT] + [VALUE] knob

## Editing Parameters

Operation	Shortcut
Edit the parameter value in large steps	[SHIFT] + [VALUE] knob
Edit the SCATTER DEPTH	(when FILL IN Type = SCATTER) [FILL IN TRIG] + [VALUE] knob

## Editing a Pattern

Operation	Shortcut
Show the PTN SETTING screen	[SHIFT] + [PTN SELECT]
Provisionally generate a random pattern	[PTN SELECT] + [SAMPLE]
Change the SCATTER DEPTH	(when FILL IN Type = SCATTER) [FILL IN TRIG] + [VALUE] knob
Show the FILL IN EDIT screen	[SHIFT] + [FILL IN TRIG]

## MOTION

Operation	Shortcut
Show the ERASE MOTION screen	[SHIFT] + Long-press [VARIATION]
Show the MOTION/ VELOCITY input screen	(in TR-REC mode) Long-press a pad [1]–[16]
Erase motion data of a specific track of a variation selected for playback	[SHIFT] + [VARIATION] + Pad [BD]–[OH]
Erase motion data of a specific knob of the variation selected for playback	[SHIFT] + [VARIATION] + knob
Erase motion data of a specific variation	[SHIFT] + [VARIATION] + Pad [A]–[H]

## Inputting Sub Steps, Weak Beats, Alternates, and Dynamics

Operation	Shortcut
Change the sub step division	[SUB] + [VALUE] knob
Input sub steps	[SUB] + [1]–[16]
Input weak beats (WEAK BEATS)	[SHIFT] + [1]–[16]
Input alternate sounds (ALT INST)	[BD]–[OH] + [1]–[16]

## Playback/Recording

Operation	Shortcut
Record to a variation that's not playing	[TR-REC] + Pad [A]–[H]
During pattern playback, forcibly return to the beginning of the pattern	[SHIFT] + [START/STOP] during playback
If more than one variation is selected, move to the beginning of any one of those variations	During playback, press the [VARIATION] button and then press [SHIFT] + pad [9]–[16]
Silence a sample that continues playing after stopping	[SHIFT] + [START/STOP] while stopped

## Tempo/Nudge

Operation	Shortcut
Adjust tempo in 0.1 units	Press the [TEMPO] button, and then turn the [VALUE] knob while holding down the [SHIFT] button
Tap tempo	While holding down the [SHIFT] button, press the [TEMPO] button three or more times.
Move playback timing earlier (nudge function)	[SHIFT] + [COPY]
Move playback timing later (nudge function)	[SHIFT] + [UTILITY]

## Copying

Operation	Shortcut
Copy pattern (PATTERN COPY screen)	[COPY] + [PTN SELECT]
Copy kit (KIT COPY screen)	[COPY] + [KIT]
Copy instrument (INST COPY screen)	[COPY] + [INST]
Copy selected track (track copy-destination confirmation screen)	[COPY] + [BD]–[OH]
Copy selected variation (variation copy-destination confirmation screen)	[COPY] + Pad [A]–[H]

## Deleting

Operation	Shortcut
Delete pattern	(after pressing the [PTN SELECT] button to enter the PATTERN SELECT screen) [CLEAR] + pad [1] (BD)–[16] (H)
Delete variation	Press the [VARIATION] button, and then press [CLEAR] + pad [9]–[16]
Delete track (delete all steps in the track)	[BD]–[OH] + [CLEAR]
Delete motion data of a specific track of the variation selected for playback	[SHIFT] + [VARIATION] + Pad [BD]–[OH]
Delete motion data of a specific knob of the variation selected for playback	[SHIFT] + [VARIATION] + knob
Delete motion data of a specific variation	[SHIFT] + [VARIATION] + Pad [A]–[H]

## Editing an Instrument or Track

Operation	Shortcut
Change the instrument category	(after pressing the [INST] button to enter the INST SELECT screen) [SHIFT] + [VALUE] knob
Group instruments	(after using [SHIFT] + [KIT] to enter the KIT EDIT screen) Long-press the [BD]–[OH] that you want to be the master instrument, and when the INST GROUP screen appears, press the [BD]–[OH] buttons that you want to specify as slave instruments.
Temporarily create a random instrument	[SAMPLE] + [BD]–[OH]
Temporarily randomize all instruments	[SAMPLE] + [INST]

## Assigning Parameters to the [CTRL] Knob

Operation	Shortcut
Assign a parameter to the MASTER FX [CTRL] knob	While the [BD]–[OH] buttons are unlit [KIT] + MASTER FX [CTRL] knob
Show the parameter that's assigned to the [CTRL] knob	[KIT] + [BD]–[OH]
Assign a parameter to the [CTRL] knob	While one of the [BD]–[OH] buttons is lit [KIT] + [CTRL] knob

## Performing on the Pad

Operation	Shortcut
Play sub steps	[SUB] + Pad [1] (BD)–[6] (OH)
Switch between sub steps and flams	[SHIFT] + [SUB]
Play weak beats (WEAK BEATS)	[SHIFT] + Pad [1] (BD)–[6] (OH)
Play alternate sounds (ALT INST)	[BD]–[OH] + Pad [1] (BD)–[6] (OH)
Play a roll	Pad [12] (16th)–[13] (32nd) + Pad [1] (BD)–[6] (OH)
Hold a roll	[SHIFT] + [INST PLAY] + Pad [12] (16th)–[13] (32nd) + Pad [1] (BD)–[11] (OH)
Hold step loop play	(in the STEP LOOP state) [STEP LOOP] button or one of the [BD]–[OH] buttons + the pad [1] (BD)–[16] (H) that you want to hold
Play back steps as rolls when step loop playback is on	(in the STEP LOOP state) Pad to be played in step loop mode [1] (BD)–[16] (SCATTER) + [VALUE] knob

## Reloading

Operation	Shortcut
Load a pattern	[UTILITY] + [PTN SELECT]
Load a variation	While [VARIATION] is lit, [UTILITY] + Pad [A]–[H]
Load a track	[UTILITY] + [BD]–[OH]
Load controllers (all)	[UTILITY] + [KIT]
Load controller (currently selected instrument)	[UTILITY] + [INST]
Load a instrument	[UTILITY] + [SAMPLE] + [BD]–[OH]
Load all instruments	[UTILITY] + [SAMPLE] + [INST]

# Main Specifications

<b>Power Supply</b>	Ni-MH battery (AA, HR6) X 4 Alkaline battery (AA, LR6) X 4 Obtained via USB port (USB bus power)
<b>Current Draw</b>	500 mA
<b>Expected battery life under continuous use</b>	Alkaline battery: Approx. 4.5 hours Ni-MH battery: Approximately 5.5 hours (When using batteries having a capacity of 1,900 mAh.) * This can vary depending on the specifications of the batteries, capacity of the batteries, and the conditions of use.
<b>Dimensions</b>	224 (W) X 132 (D) X 61 (H) mm 8-13/16 (W) X 5-3/16 (D) X 2-3/8 (H) inches
<b>Weight (including batteries)</b>	705 g 1 lb 9 oz
<b>Accessories</b>	Leaflet "Read Me First" Alkaline battery (AA, LR6) X 4

\* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.