



JX-3P/SYSTEM-8 Parameter Correspondence Table

Controller Map

JX-3P (Original hardware)

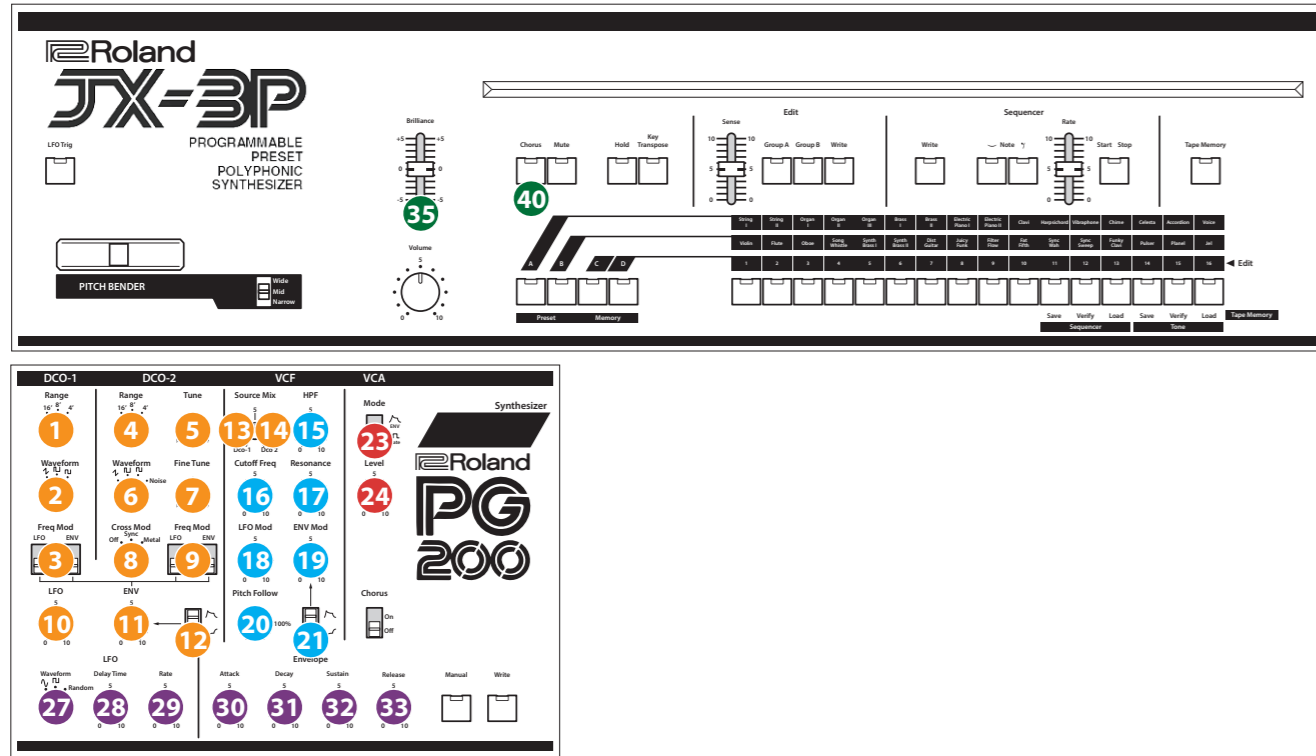

SYSTEM-8 (Hardware)

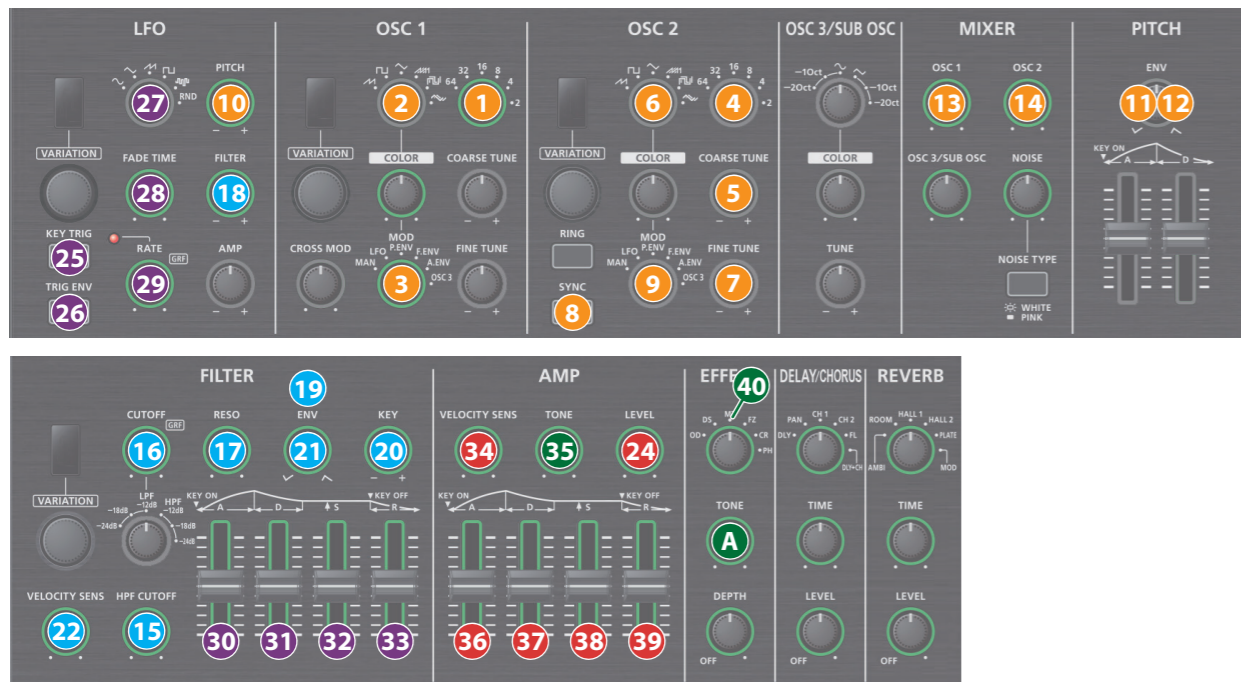

23 → [MENU] - "PATCH EDIT" - "VCA Mode"

36 37 38 39 When the "VCA Mode" is ENV2, these sliders are available as VCA Envelope.

A When choosing JX-3P Chorus, "NOISE LEVEL" is adjustable with this knob.

Parameter List

No.	Parameter	Value
1	DCO-1 Range	64FEET / 32FEET / 16FEET / 8FEET / 4FEET / 2FEET
2	DCO-1 Waveform	SAW / SQR / PULSE
3	DCO-1 Freq Mod	OFF / LFO / ENV / LFO+ENV
4	DCO-2 Range	64FEET / 32FEET / 16FEET / 8FEET / 4FEET / 2FEET
5	DCO-2 Tune	-128 - 0 - +127
6	DCO-2 Waveform	SAW / SQR / PULSE / WHITE NOISE
7	DCO-2 FineTune	-128 - 0 - +127
8	DCO Cross Mod	OFF / SYNC / METAL
9	DCO-2 Freq Mod	OFF / LFO / ENV / LFO+ENV
10	DCO LFO Mod	-128 - 0 - +127
11 12	DCO ENV Mod	-128 - 0 - +127
13	Source Mix DCO-1	0 - 255
14	Source Mix DCO-2	0 - 255
15	HPF	0 - 255
16	VCF Cutoff	0 - 255
17	VCF Resonance	0 - 255
18	VCF LFO Mod	-128 - 0 - +127
19 21	VCF ENV Mod	-128 - 0 - +127
20	VCF Pitch Follow	-128 - 0 - +127
22	VCF Velocity Sens	0 - 255 (Not exist on original JX-3P.)
23	VCA Mode	ENV-1 / ENV-2 / GATE *[MENU] - "PATCH EDIT" - "VCA Mode"
24	VCA Level	0 - 255
25	LFO KEY TRIG	On / Off (Not exist on original JX-3P.)
26	LFO TRIG ENV	On / Off (Not exist on original JX-3P.)
27	LFO Waveform	SIN / SQR / RND
28	LFO Delay Time	0 - 255
29	LFO Rate	0 - 255
30	ENV-1 Attack	0 - 255
31	ENV-1 Decay	0 - 255
32	ENV-1 Sustain	0 - 255
33	ENV-1 Release	0 - 255
34	VCA Velocity Sens	0 - 255 (Not exist on original JX-3P.)
35	Brilliance	-128 - 0 - +127
36	ENV-2 Attack	0 - 255 * When the "VCA Mode" is ENV2, these sliders are available as VCA Envelope.
37	ENV-2 Decay	0 - 255 * When the "VCA Mode" is ENV2, these sliders are available as VCA Envelope.
38	ENV-2 Sustain	0 - 255 * When the "VCA Mode" is ENV2, these sliders are available as VCA Envelope.
39	ENV-2 Release	0 - 255 * When the "VCA Mode" is ENV2, these sliders are available as VCA Envelope.
40	EFFECT Type	Chorus (JX-3P Chorus)
A	TONE	When choosing JX-3P Chorus, "NOISE LEVEL" is adjustable with this knob.